

BPTA-WDPGR701

Bitpower Sedna GR701 for ASUS ROG HYPERION GR701 Case

配件

1 M4x6 螺絲

10 支



 
2 BPTA-EFW-GS

1 個



3 接頭 + 軟管

1 個




4 BP-BB2WP-P02

1 個



5 C32-WTP


1 個

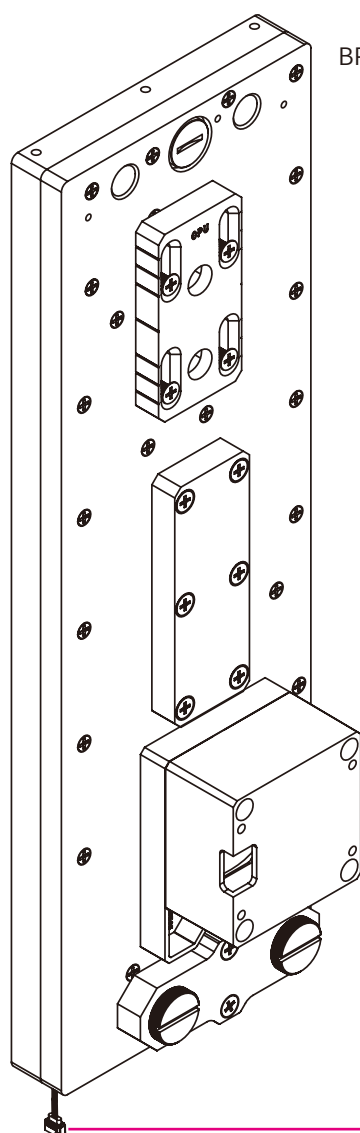

BPTA-WDPGR701


★ 請接**1**主板或**2**其他設備的 DRGB 插槽

 1



主板

2 BPTA-DRGBMFC

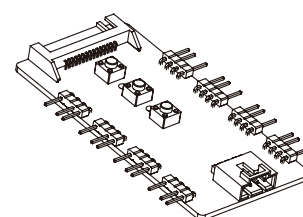


DRGB 控制器 (不包括)

Notice

- Please read and carefully follow the installation guide in this manual prior to installing. The installation of this block requires some advanced knowledge about your hardware. As such, if you feel uncomfortable with the steps involved in installing this product, please reach out to our customer support for assistance.
- We recommend the use of a leak tester, such as our Bitspower Digital Leak Detector, after completing the assembly of your liquid cooling loop to make sure there are no leaks prior to filling up your loop with coolant.
- **NEVER** use the leak tester when liquid is present in the loop or when the pump is in operation.
- **DO NOT** exceed 0.5 kg/cm² or 7.0 PSI when using the leak tester. Excessive pressure exerted on your loop may result in damage to your liquid cooling components.
- Bitspower is not responsible for any potential damage from the use of a leak tester.
- **NEVER** overtighten or use excessive force during the installation of any components, unless otherwise stated in the instruction. Overtightening will result in damage to your components.
- Bitspower recommends the use of our Bitspower Pellucid Coolant for the best performance of your liquid cooling setup, as well as using Bitspower Dye for your desired color. We advise against the use of pure distilled water as it may lead to the development of scale and algae over time. Avoid using any other non-recommended coolants or liquid. The use of non-recommended coolants or liquid can result in unexpected abnormalities, such as peeling of the coating on your hardware, built-up of deposit or residue that will result in clogs, tube or O-ring degradation and deformation, or improper operation of the coolant pump. Bitspower is not responsible for any issues that may arise from the use of non-recommended coolant.
- **NEVER** mix or introduce components made from different kinds of metal to your liquid cooling loop. Never use Aluminum based liquid cooling components with Bitspower products. Doing this will result in serious damage and leaks with your liquid cooling components and will void your warranty. If you have any doubts or questions about the components you are using, please reach out to our customer support for assistance.
- Bitspower reserves the right to change the design and interpretations of our products without any prior notice. Actual design and color of product may differ from what is shown on our website.

供電與水泵

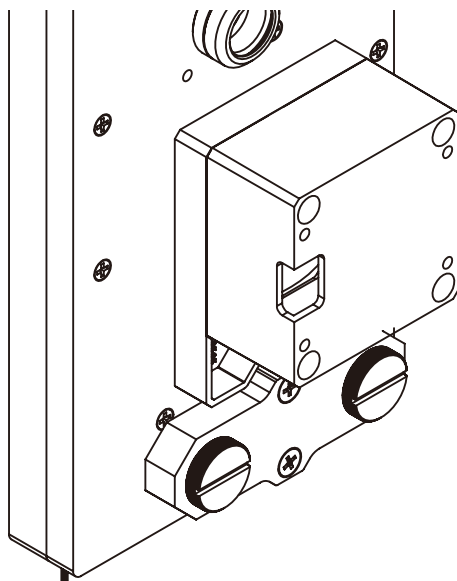

規格

額定電壓：12V DC
功耗：15W
最大流量：11±15% L/min
噪音：≤ 40dBA
PWM：有
平均壽命：15000 hours
保固：2 years
尺寸：62 x 62 x 46.7mm
水泵最大揚程：5.5±0.5m

如果有需要

所有管子連接孔均為 G 1/4 螺牙

O 圈 (54×50×2mm)

G1/4 堵頭

孔位偏移塊 (CPU)

M4×16mm 螺絲


水路導通模組

O 圈 (60×56×2mm)


導通

G1/4 螺牙堵頭


M4×16mm 螺絲

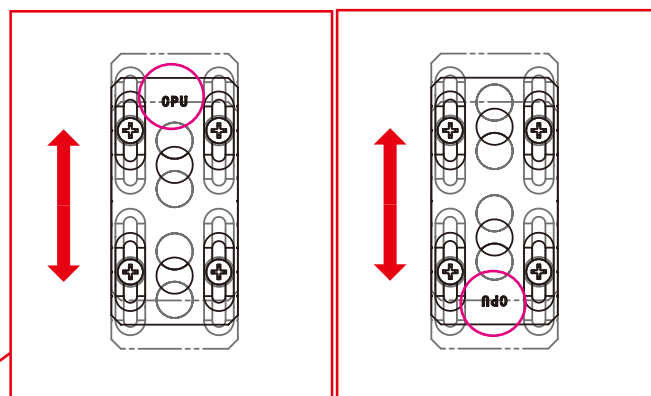

※ 可通過調整孔位偏移塊的位置，以對應不同主機板的 CPU 安裝位置。

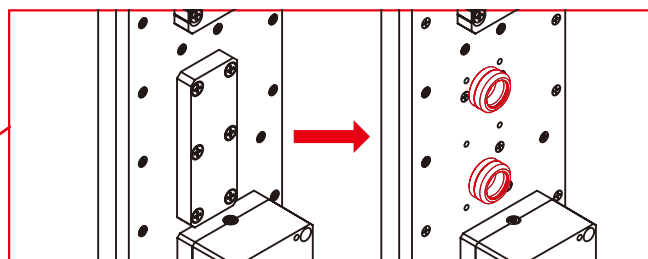

※ 安裝 GPU 冷頭時，需要把水路導通模組拆除，然後安裝相應的接頭即可使用。


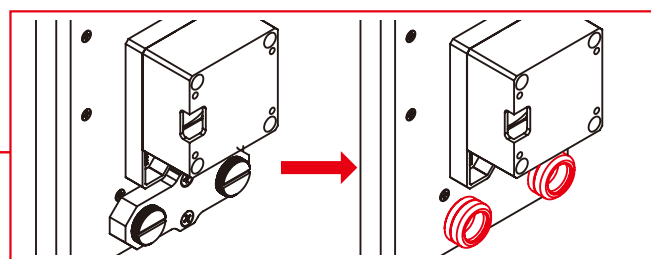


※ 安裝冷排時，需要把導通模組拆除，然後安裝相應的接頭即可使用。

注水

選擇喜好的水冷濃縮液顏色，以純淨水調合，由“填水孔”注入至水箱九分滿，接著利用“24PIN 跳線開關”啟動電源，讓水路中的空氣集中至水箱排出，再依水量繼續添加至水箱九分滿左右即可。

(24PIN 跳線開關用途：需無經主板開啟 ATX 電源時，使電源直接開啟供電。)

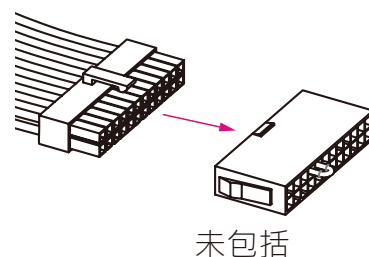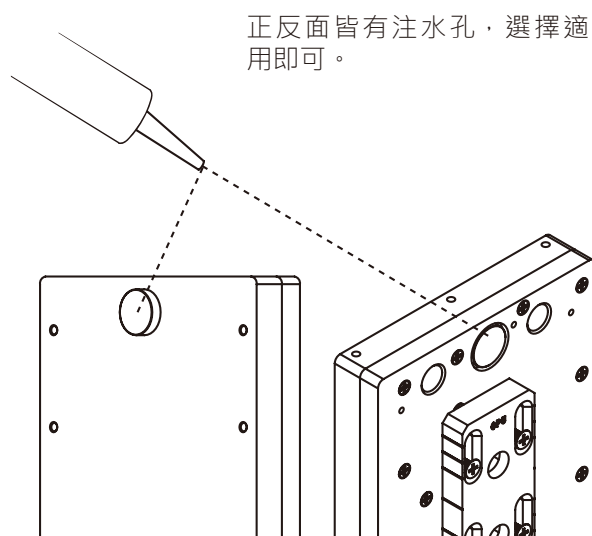

產品保修規範

質保期時效，送修的產品凡有以下狀況，不在保修範圍內。

水冷頭

- 冷頭自體螺絲，有拆裝痕跡，整套產品失保。
- 頂部的進出口，因為外力使用不當導致開裂。

冷排

- 因為外力使用不當導致冷排水道破裂漏水。
- 進出水孔因為外力使用不當導致開裂。

接頭

- 有器械夾持導致的損傷痕跡。

水泵

- 無水通電導致水泵燒毀。
- 底部 pcb 進水燒毀。
- 水箱底座與水泵不可拆解，一經拆解即不保固。

風扇


- 進水燒毀。

堵頭

- 堵頭、螺絲規格或牙紋不達標，會鎖不了孔位，暴力裝配致使破裂。


方法 1

步驟 1

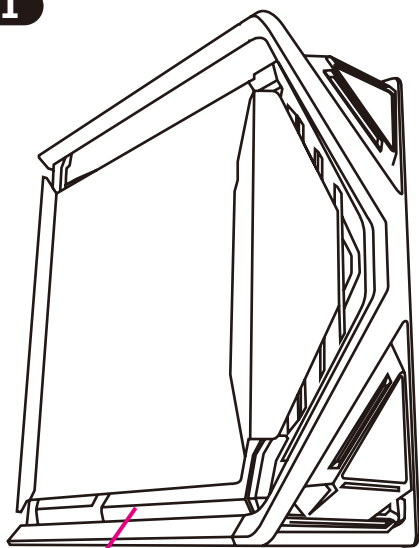


ROG Hyperion GR701
(不包括)

步驟 2

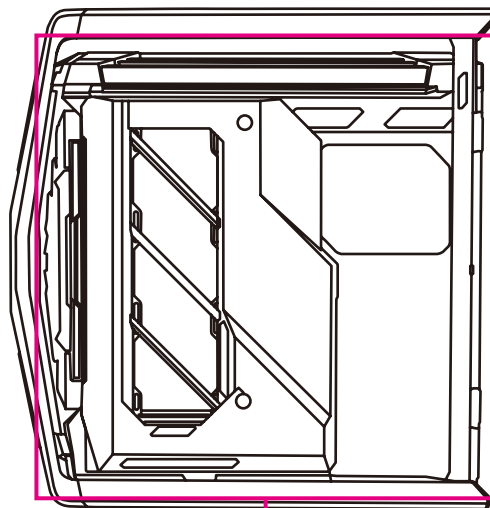


拆下側面板

步驟 3

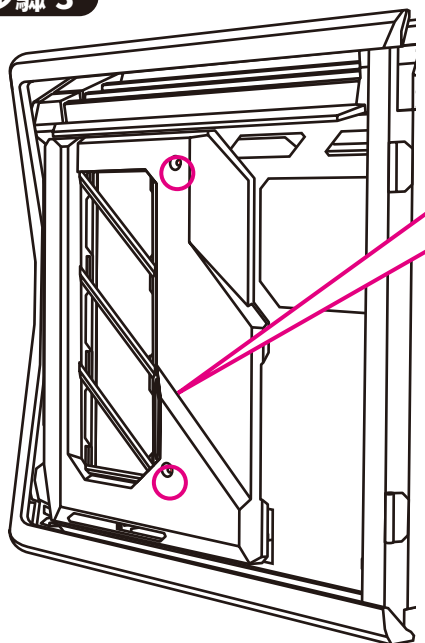

打開後蓋

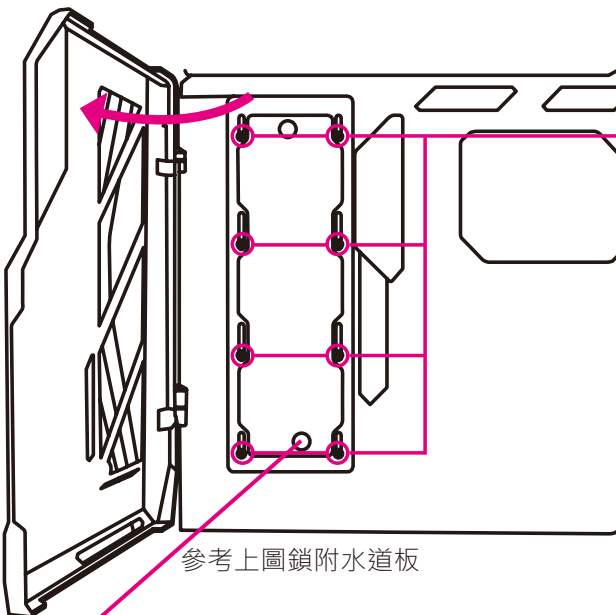

參考上圖鎖附水道板

M4x6 螺絲

BPTA-WDPGR701

洩水


建議將洩水接頭安裝於水冷系統的最低點。

步驟 1
將洩水接頭上蓋旋起。


步驟 2
換上洩水配件，旋入配件過程中即會逐漸洩水，建議外接管線以利洩水。



BPTA-EFW

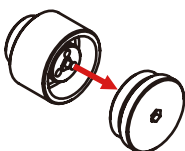

[5]

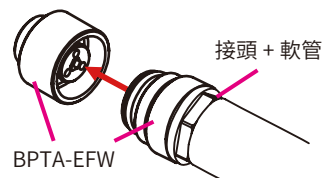

接頭 + 軟管

BPTA-EFW

建議安裝方式
主件說明 (需另購)
A BPN-NLS360-F2PB

B BPTA-CPUMS-SKI

C BPTA-FX1812NT-3


D BPTA-DOTFH1622

E BP-NCCLT16AC-L500

F BPTA-90RE


G GPU Water Block

H BPTA-F95

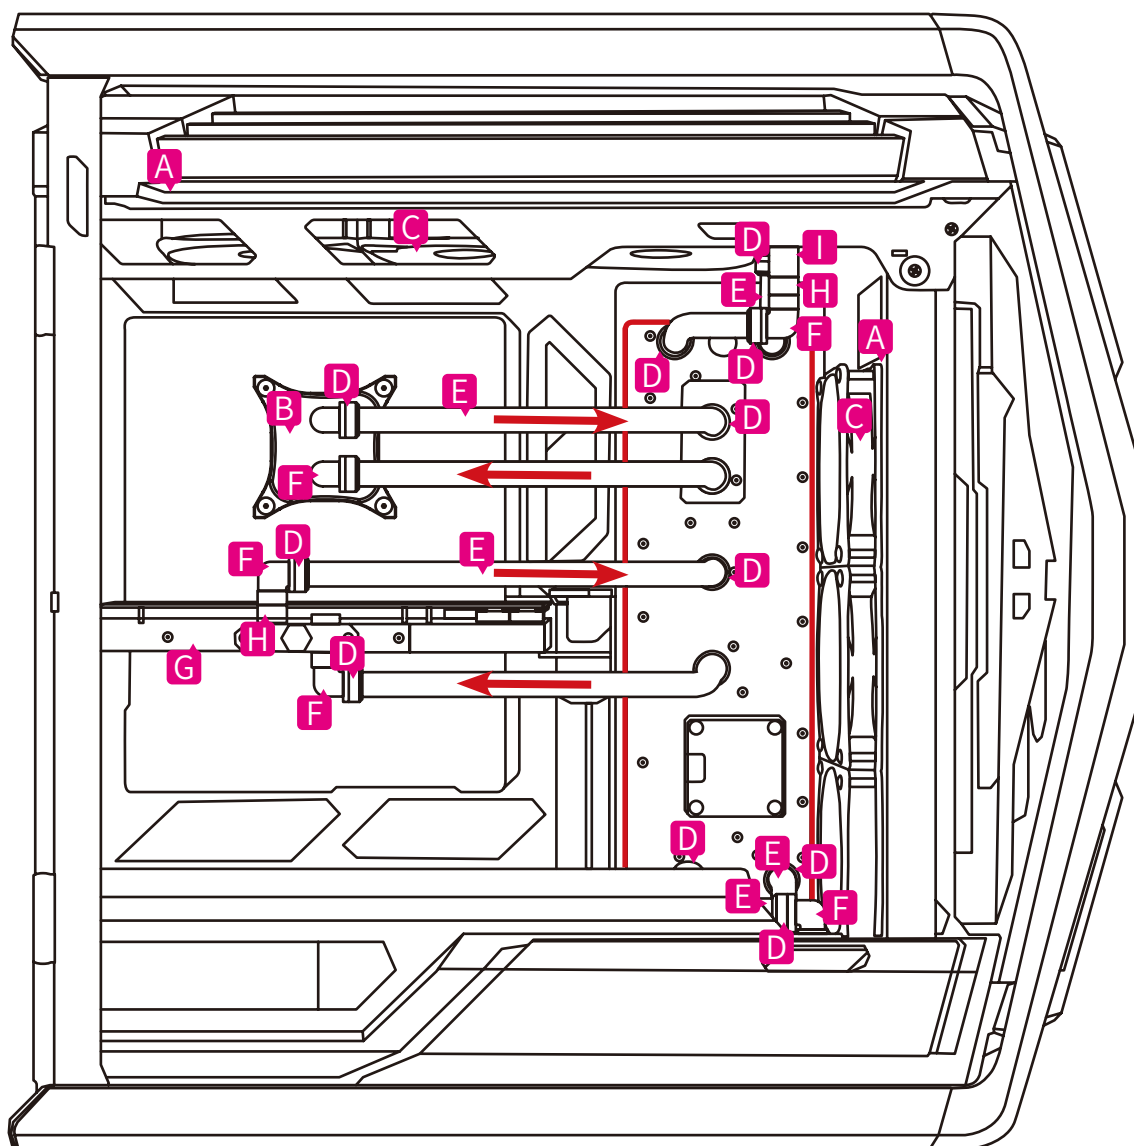
I BPTA-F64


方法 2


步驟 1

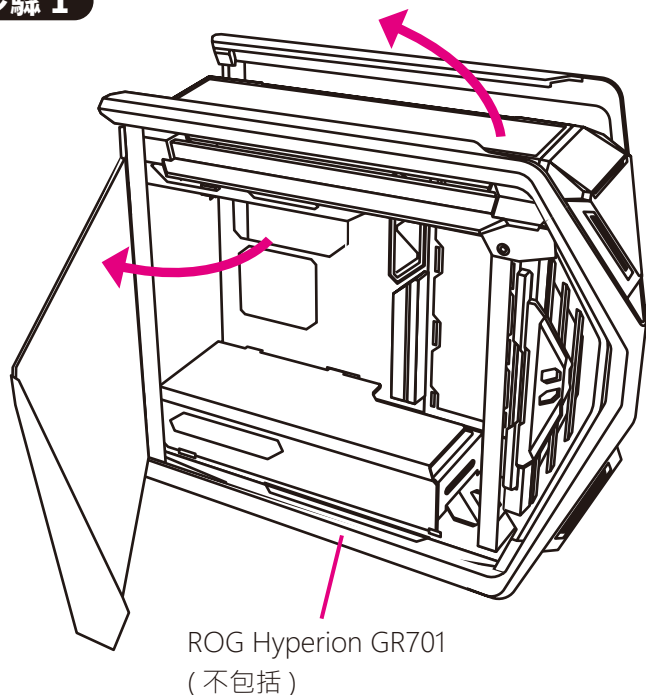


步驟 2

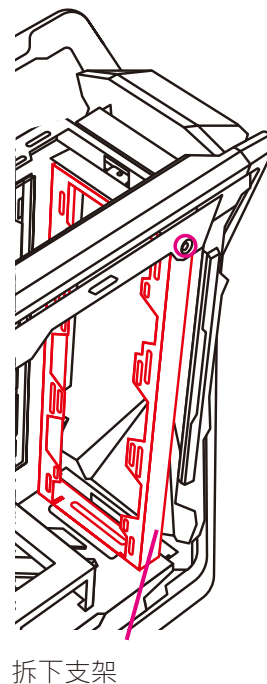

步驟 3

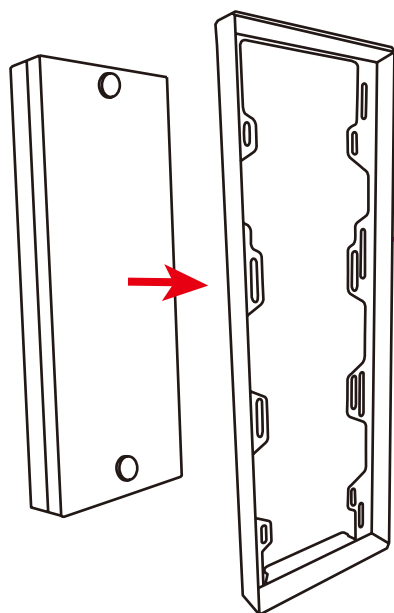




洩水

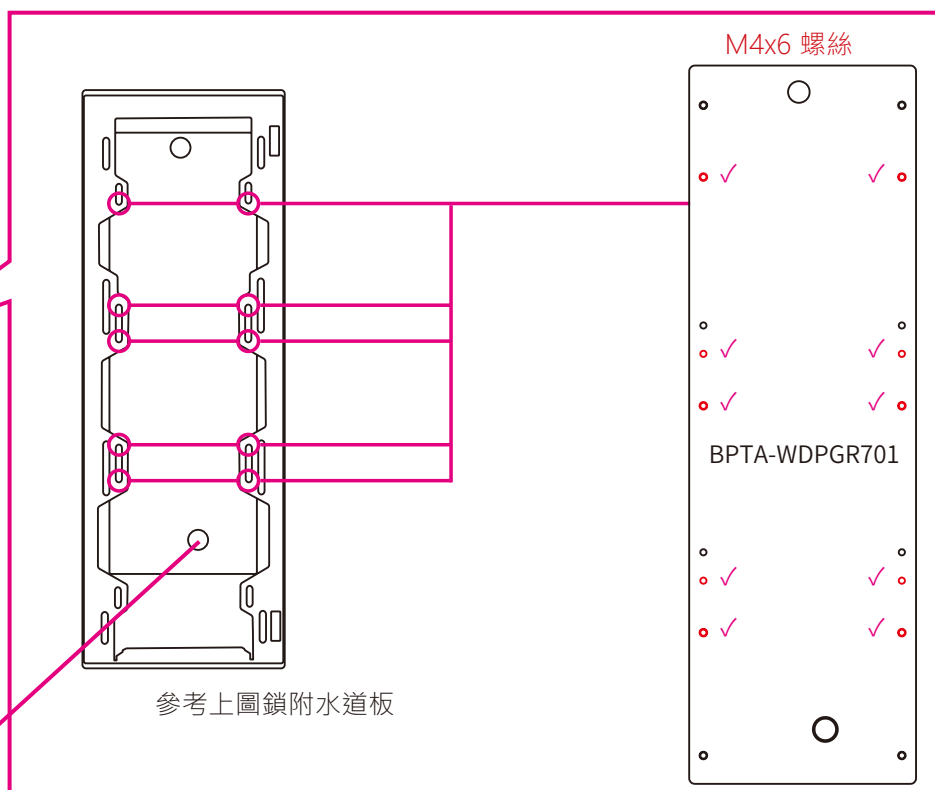

建議將洩水接頭安裝於水冷系統的最低點。

步驟 1
將洩水接頭上蓋旋起。

步驟 2
換上洩水配件，旋入配件過程中即會逐漸洩水，建議外接管線以利洩水。

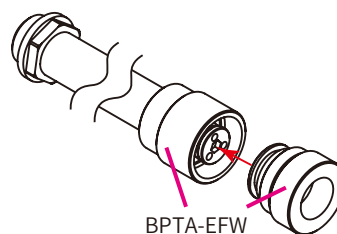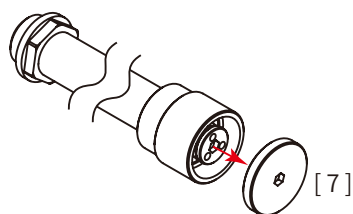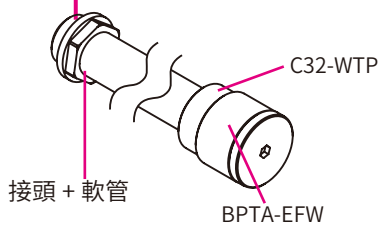

建議安裝方式

主件說明 (需另購)

- | | | |
|--------------------------|----------------------------|--------------------------|
| A BPN-NLS360-F2PB | E BP-NCCLT16AC-L500 | I TA-GFALP4169-GS |
| B BPTA-CPUMS-SKI | F BPTA-90RE | J BPTA-PAM |
| C BPTA-FX1812NT-3 | G GPU Water Block | |
| D BPTA-DOTFH1622 | H BPTA-F95 | |

