

BPTA-WDPO11DEVO-NL


Bitpower Sedna O11D EVO-N for LIAN LI O11 Dynamic EVO Series (Normal Mode Ver.)

Accessories


- 1** M4x13 Screw 2 PCS




- 2** BPTA-WDPO11DEVO-NL 1 PCS

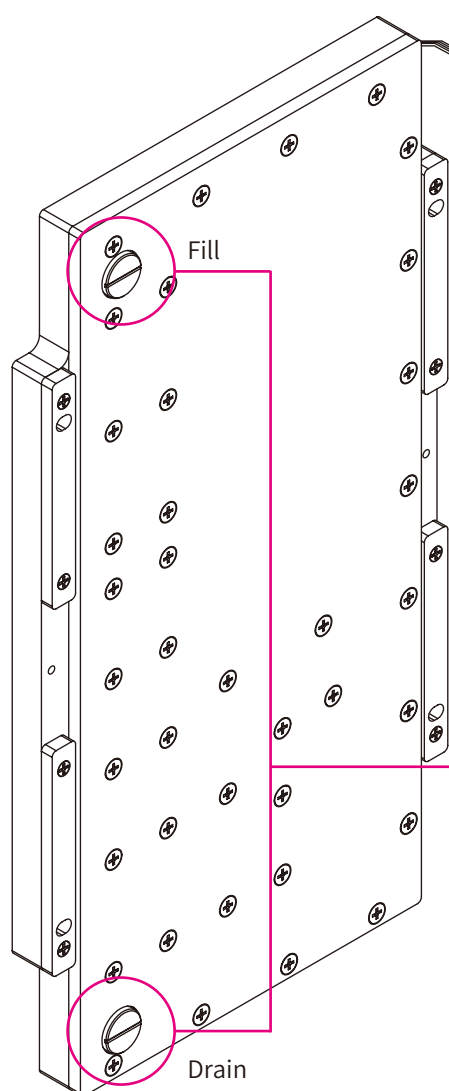

★ Digital RGB PIN on **1** motherboard or **2** other equipment.

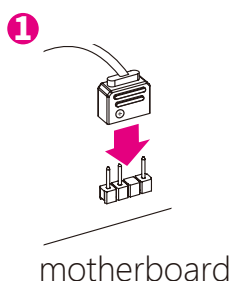

- 2** BPTA-DRGBMFC

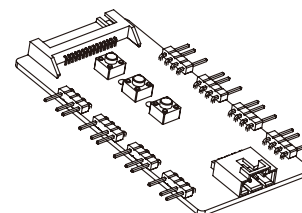


DRGB Multi Function Controller
(Not included)

Both the front and the back side of the EVO distro plate have a fill or drain hole, choose the one that suits you.

Notice

- Please read and carefully follow the installation guide in this manual prior to installing. The installation of this block requires some advanced knowledge about your hardware. As such, if you feel uncomfortable with the steps involved in installing this product, please reach out to our customer support for assistance.
- We recommend the use of a leak tester, such as our Bitspower Digital Leak Detector, after completing the assembly of your liquid cooling loop to make sure there are no leaks prior to filling up your loop with coolant.
- **NEVER** use the leak tester when liquid is present in the loop or when the pump is in operation.
- **DO NOT** exceed 0.5 kg/cm² or 7.0 PSI when using the leak tester. Excessive pressure exerted on your loop may result in damage to your liquid cooling components.
- Bitspower is not responsible for any potential damage from the use of a leak tester.
- **NEVER** overtighten or use excessive force during the installation of any components, unless otherwise stated in the instruction. Overtightening will result in damage to your components.
- Bitspower recommends the use of our Bitspower Pellucid Coolant for the best performance of your liquid cooling setup, as well as using Bitspower Dye for your desired color. We advise against the use of pure distilled water as it may lead to the development of scale and algae over time. Avoid using any other non-recommended coolants or liquid. The use of non-recommended coolants or liquid can result in unexpected abnormalities, such as peeling of the coating on your hardware, built-up of deposit or residue that will result in clogs, tube or O-ring degradation and deformation, or improper operation of the coolant pump. Bitspower is not responsible for any issues that may arise from the use of non-recommended coolant.
- **NEVER** mix or introduce components made from different kinds of metal to your liquid cooling loop. Never use Aluminum based liquid cooling components with Bitspower products. Doing this will result in serious damage and leaks with your liquid cooling components and will void your warranty. If you have any doubts or questions about the components you are using, please reach out to our customer support for assistance.
- Bitspower reserves the right to change the design and interpretations of our products without any prior notice. Actual design and color of product may differ from what is shown on our website.



Power Supply and Pump

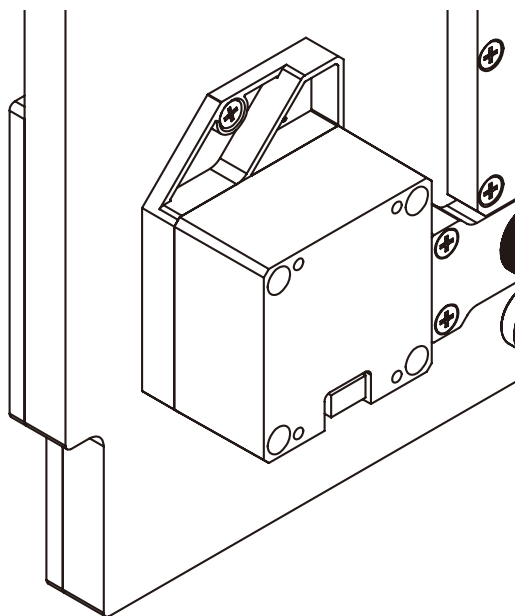


SPECIFICATION

Rated voltage : 12V DC
Power consumption : 15W
Maximum flow : $11 \pm 15\%$ L/min
Noise : $\leq 40\text{dBA}$
PWM : Yes
MTBF : 15000 hours
Warranty : 2 years
Dimension: 62 x 62 x 46.7mm
Maximum lift of the water pump: $5.5 \pm 0.5\text{m}$


If need be

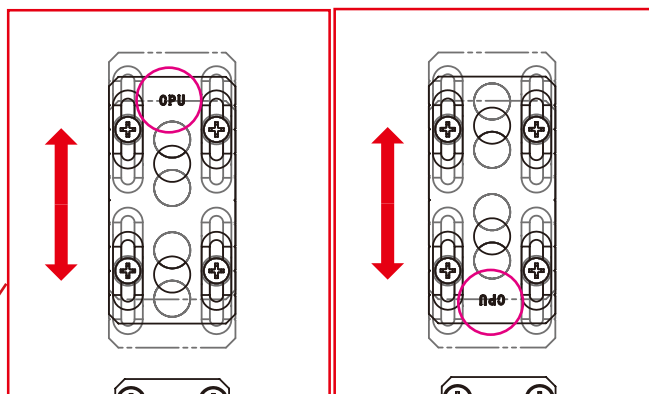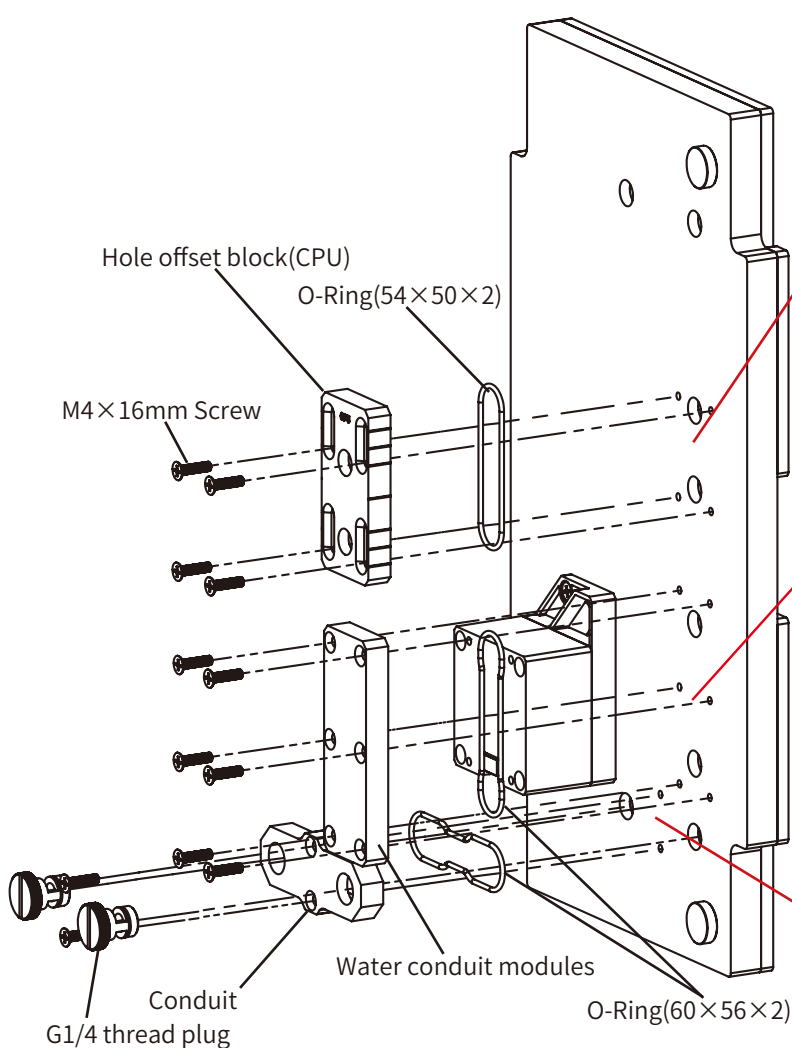

※ The position of the Hole position offset block can be adjusted to correspond to the CPU installation position of different motherboards.

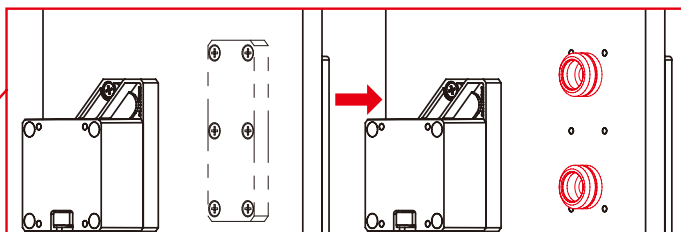

※ When installing the GPU, it is necessary to remove the conduit module, and then install the corresponding fittings.

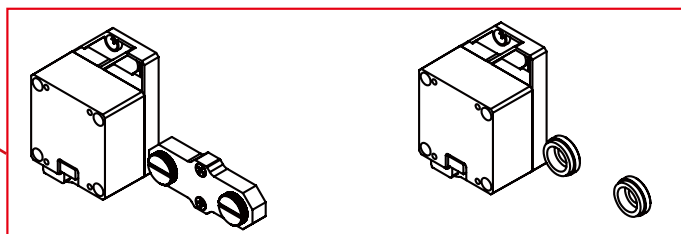


※ When installing the radiator, it is necessary to remove the conduit module, and then install the corresponding fittings.

Water

Choose your desired dye color and mix it with pure distilled water. Pour the water mix into the reservoir via the water filling hole. Once the reservoir is 90% full, turn on the power supply for the pump to run and let the air exit the loop. Turn off the power supply when the reservoir is near empty. Repeat until all the air has exited the loop.

(In order to power the pump only, connect the power supply switch connector to the 24 pin cable of the power supply. This will allow the power supply to bypass the motherboard and make the pump work alone.)

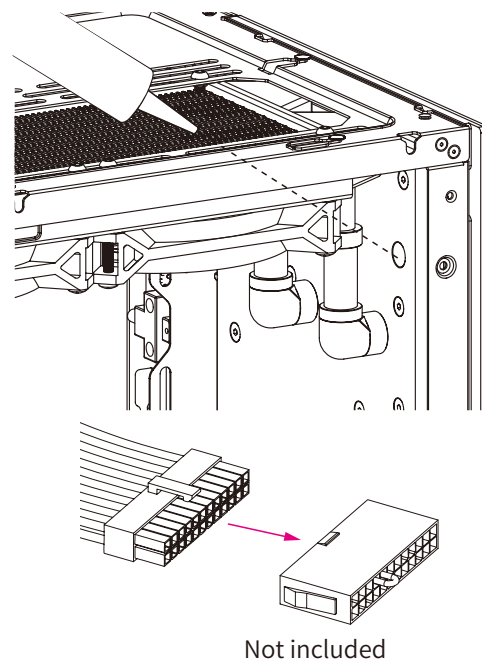

Product Warranty Rules

The warranty will be void if any of the situations below happen.

Water Block

- The CPU block and the screws in it has any trace of disassemble.
- The top plate inlet and outlet ports, due to improper use of external forces, are cracked.

Radiator

- The fin of the radiator are broken or deformed due to improper use of external forces.
- The inlet and outlet of the radiator are cracked due to improper use of external forces.

Fitting

- There are signs of damage caused by instrument clamping on the fittings.

PUMP

- Pump damage from pump operation without any liquid.
- Pump damage caused by water leak on the pump's PCB.
- Water tank has been separated from the pump.


Fan

- Fan damaged by water leak.

G1/4 Screw plug


- If the plug, screw specification or thread are not up to standard, the screw can not be locked. If you tighten the screw violently, the device will be damaged.

step 1

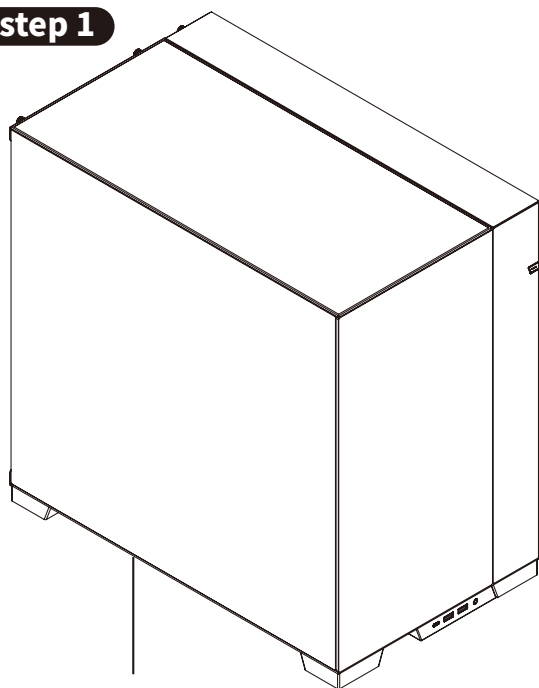


PC-O11 Dynamic EVO
(Not included)

step 2

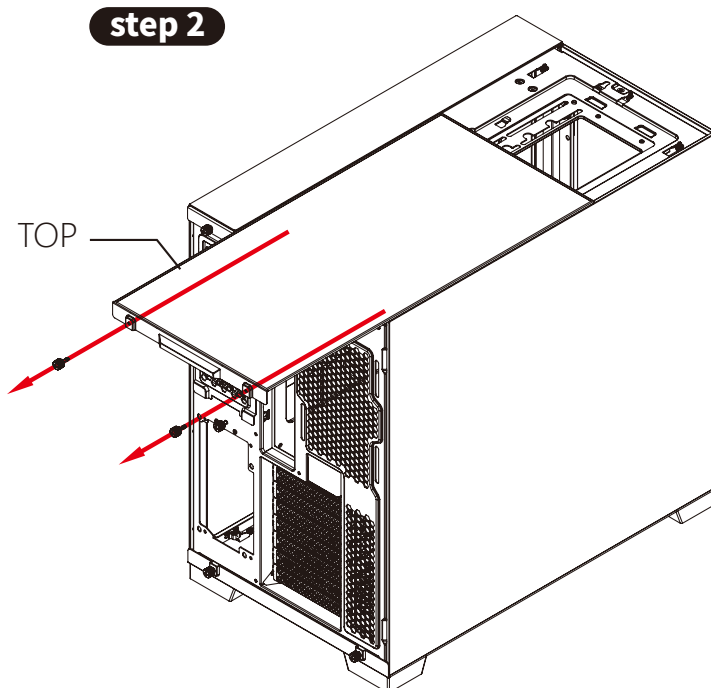


step 3

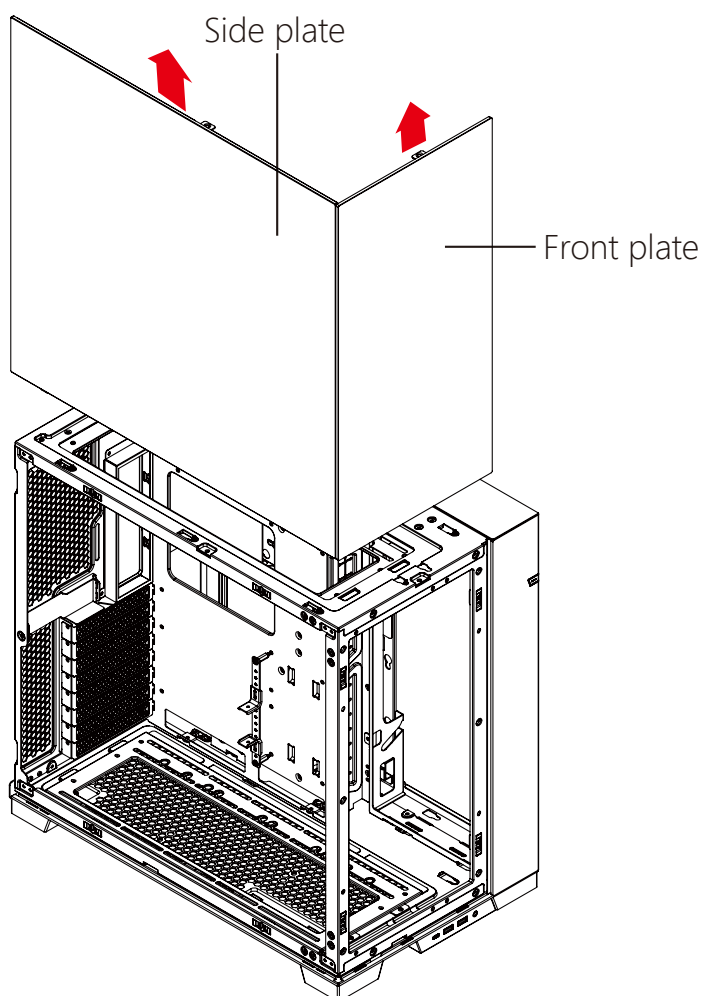

step 4

BPTA-WDPO11DEVO-NL

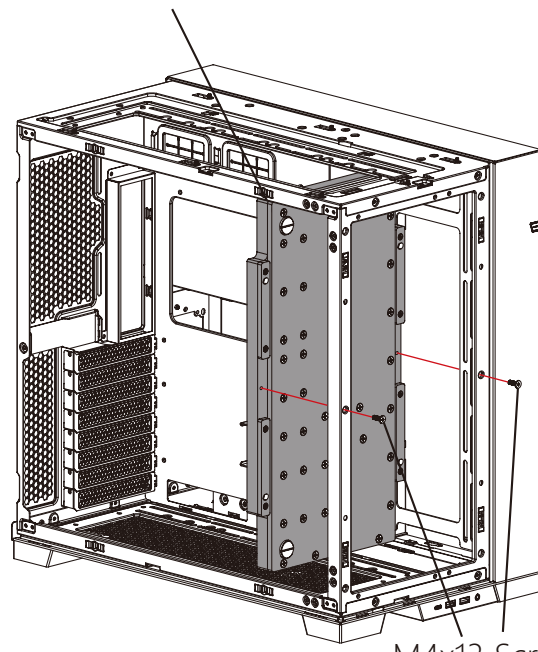

M4x13 Screw

Recommended installation method

Accessories(additional purchases)

- A** BPN-NLS360-F2PB 1PC
- B** BPTA-CPUMS-SKI 1PC
- C** BPTA-FX1812 9PCS
- D** BPTA-DOTFH1622 8PCS
- E** BP-NCCLT16AC-L500
- F** BPTA-DRGBMFC 1PC
- G** BP-PFANMFH 1PC

