


Dual Power DRGB Fan Controller


BPM-DPOWRGBFC

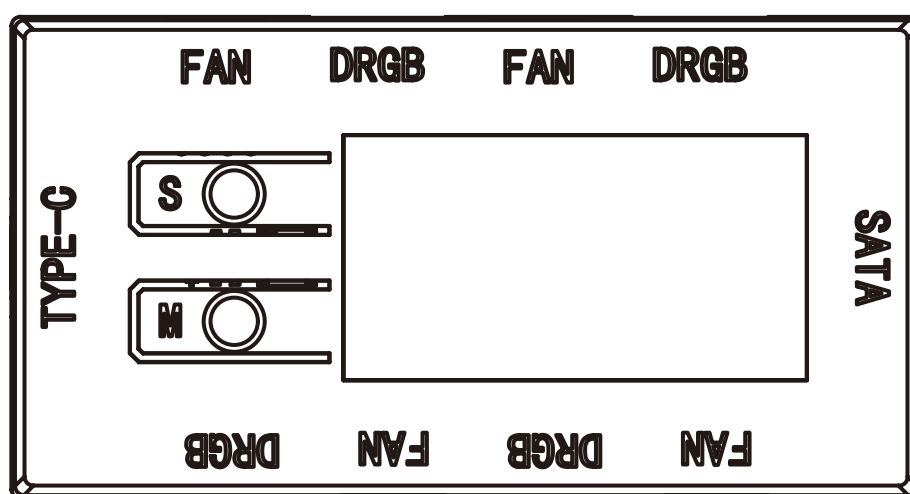

Notice

- Please read and carefully follow the installation guide in this manual prior to installing. The installation of this block requires some advanced knowledge about your hardware. As such, if you feel uncomfortable with the steps involved in installing this product, please reach out to our customer support for assistance.
- We recommend the use of a leak tester, such as our Bitspower Digital Leak Detector, after completing the assembly of your liquid cooling loop to make sure there are no leaks prior to filling up your loop with coolant.
- **NEVER** use the leak tester when liquid is present in the loop or when the pump is in operation.
- **DO NOT** exceed 0.5 kg/cm² or 7.0 PSI when using the leak tester. Excessive pressure exerted on your loop may result in damage to your liquid cooling components.
- Bitspower is not responsible for any potential damage from the use of a leak tester.
- **NEVER** overtighten or use excessive force during the installation of any components, unless otherwise stated in the instruction. Overtightening will result in damage to your components.
- Bitspower recommends the use of our Bitspower Pellucid Coolant for the best performance of your liquid cooling setup, as well as using Bitspower Dye for your desired color. We advise against the use of pure distilled water as it may lead to the development of scale and algae over time. Avoid using any other non-recommended coolants or liquid. The use of non-recommended coolants or liquid can result in unexpected abnormalities, such as peeling of the coating on your hardware, built-up of deposit or residue that will result in clogs, tube or O-ring degradation and deformation, or improper operation of the coolant pump. Bitspower is not responsible for any issues that may arise from the use of non-recommended coolant.
- **NEVER** mix or introduce components made from different kinds of metal to your liquid cooling loop. Never use Aluminum based liquid cooling components with Bitspower products. Doing this will result in serious damage and leaks with your liquid cooling components and will void your warranty. If you have any doubts or questions about the components you are using, please reach out to our customer support for assistance.
- Bitspower reserves the right to change the design and interpretations of our products without any prior notice. Actual design and color of product may differ from what is shown on our website.

Installation

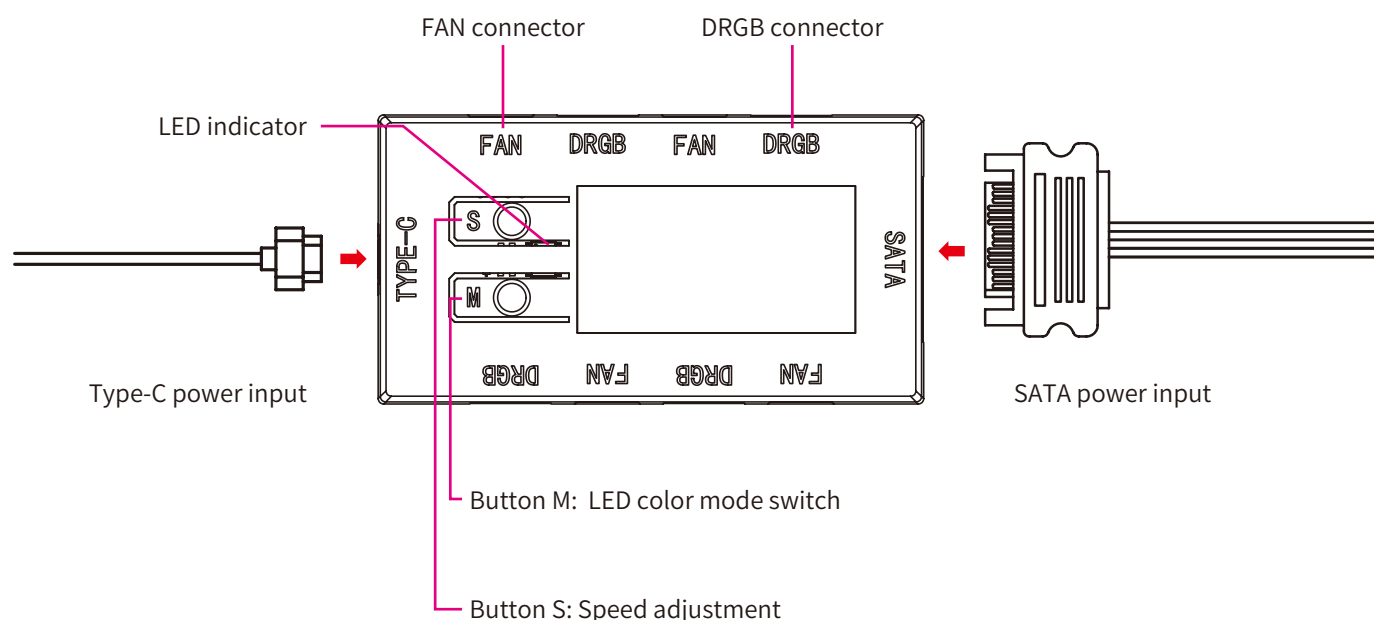

Function Description:

1. This product can be powered through either the Type-C or SATA port.
Please choose only one power input.
When LED indicator is blue, it means the device is receiving power.
2. Regardless of whether Type-C or SATA power is used,
The single FAN port outputs DC 12V operating voltage.
The single DRGB port outputs DC 5V operating voltage.
3. Press the M button to switch digital RGB lighting modes.
You can select from 8 single-color modes or 7 classic RGB lighting effects.
4. Press the S button to adjust the fan speed.
There are 4 speed levels: 30%, 50%, 80%, and 100%.
5. The product features built-in protection to prevent component damage caused by overloading.

Product Specification:

Rated Voltage: LED DC5V , Fan DC12V

Rated Current: Max 3A

F&Q

Malfunction	Cause	Countermeasure
The light bar is not on	The power cord is not connected properly	Reconnect the power port
	Power failure	Replace power supply
	The signal line is not connected properly	Reconnect the signal cable
No response to external input	Is the signal short-circuited?	Find the short circuit point
	The signal line is not connected properly	Reconnect the signal interface and confirm the signal
No reaction with single connector	Is the light strip OK?	Replace light strip
	Is the connection connected?	Check plug-in interface
The fan does not rotate	The power cord is not connected properly	Reconnect the power cord
	Power failure	Replace power supply
	The signal line is not connected properly	Reconnect the signal cable
One fan does not rotate	Is the fan OK?	Replace fan
	Is the connection connected?	Check plug-in interface