


◀ 安裝方式/Installation/安装方式

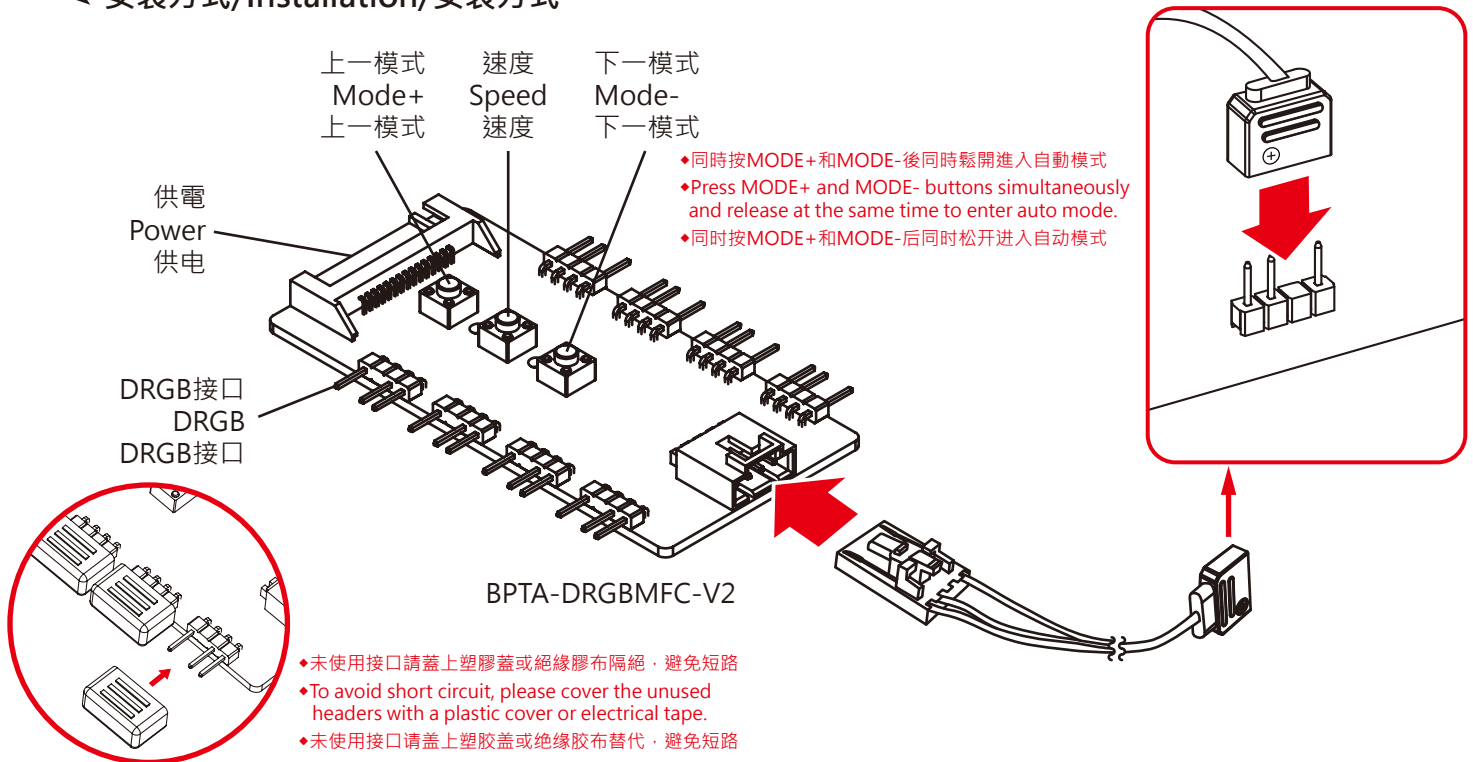

此DRGB控制器作用是擴展主板上不足的RGB接口，一個DRGB接口可分出八個，用於統一控制多個支援主板燈效的風扇和燈條等設備；同時，控制器具備自有的燈光效果，可透過控制器上的按鍵來切換。

注意事項:

- 1: 此控制器不能提升主板DRGB接口的額外供電能力，一般DRGB接口最少能提供 $5V \times 1A = 5W$ 供電能力，建議連接DRGB燈條總長度不要超過1米，若接口負載過大後出現燈光亮度明顯變暗的情況，則需要減少設備。
- 2: 接線技巧——牢記接頭上的箭頭標誌對應DRGB接頭的5V針腳。
- 3: 在獨立使用控制器時，請只接SATA端口。

規格:

工作電壓：直流電壓5V輸入

功率：小於1W

The DRGB controller is used to expand the amount of DRGB header of the motherboard. The controller can expand one DRGB header into eight, and control multiple fans and LED strips compatible light effects controlled by the motherboard. In addition, the controller has its own lighting effects, which can be controlled by the buttons found on the controller.

ATTENTION:

- 1: The controller can't increase the power supply of the DRGB header from the motherboard. A standard DRGB header can provide $5V \times 1A = 5W$ of power. It is recommended that the combined length of the LED strip connected to the controller be shorter than 1 meter. If the DRGB header is overloaded, the brightness of the light will be reduced considerably. To restore the brightness, some items plugged to the controller must be removed.
- 2: Connection tip - Keep in mind that the arrow marks on the connector corresponds to 5V pin for the DRGB headers.
- 3: When using the controller separately, please connect to a SATA port only.

Specifications:

Operating voltage: DC 5V input

Power: Less than 1W

此DRGB控制器作用是擴展主板上稀缺的RGB接口，一個DRGB接口分出八個，用於統一控制多個支持主板調光的風扇和燈帶等設備；同時，控制器自帶燈光效果，可通過按鍵進行燈光效果選擇操作。

注意事項:

- 1: 此控制器不能提升主板DRGB接口的額外供電能力，一般DRGB接口最少能提供 $5V \times 1A = 5W$ 供電能力，建議連接DRGB燈帶總長度不要超過1米，若接口負載過大後會出現燈光亮度變暗明顯則需要減少設備。
- 2: 接線技巧——牢記插頭上的箭頭標誌對應DRGB插針5V。
- 3: 在獨立使用控制器時，請只接SATA端口。

参数:

工作电压：DC5直流电压输入

功耗：小于1W



注意：跑水前，請先確認所有零件已安裝在正確的位置上，在不開主機，單開水泵的情況下，進行24小時的跑水測試，確保無漏水情況後再開主機，避免發生漏水而導致電腦零件的損壞。

Before filling in the water, please make sure all the components are installed correctly. To prevent any leakage which may damage the PC components, please perform a 24-hour leaking test with only the pump connected to the power supply.

注意：跑水前，請先确认所有零件已安装在正确的位置上，在不开主机，单开水泵的情况下，进行24小时的跑水测试，确保无漏水情况后开主机，避免发生漏水而导致电脑零件的损坏。

本公司保留對產品的設計更改以及解釋的權力，如有更動恕不另行通知，產品顏色與配件以實物為準。

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

本公司保留对产品的设计更改以及解释的权力，如有更动恕不另行通知，产品颜色与配件以实物为准。