


NEBULA

GeForce RTX 5090 ASUS TUF Gaming

BPM-VG5090AST-V2

Included Contents

- 1** BPM-VG5090AST-V2 1 PCS

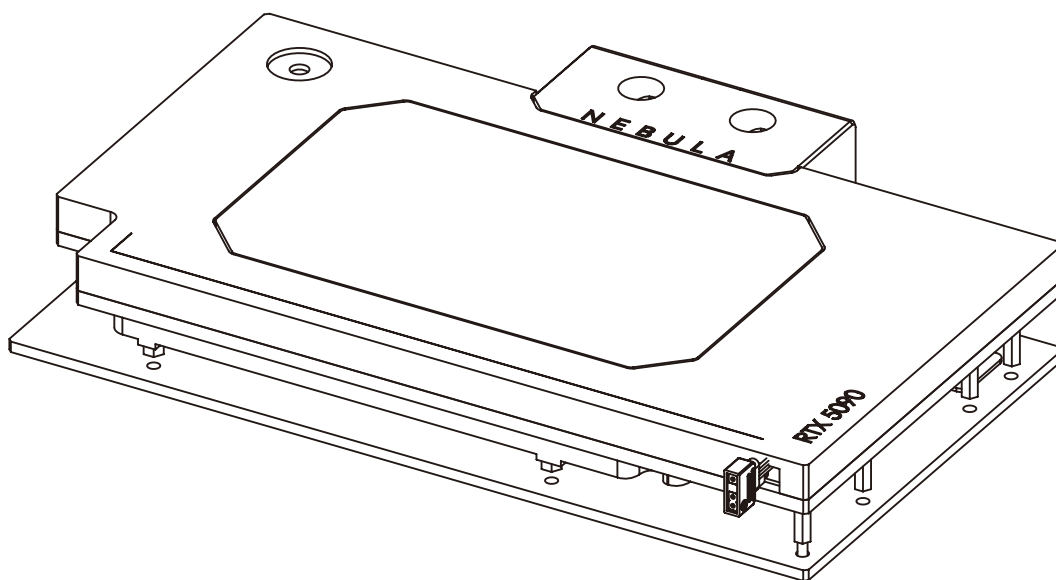


- 2** M2.5 x 8 Screw[#] 11 PCS





[#]Two screws fastened in advance.

- 3** BPA-TP1-2.5G 1 PCS



Notice

- Please read and carefully follow the installation guide in this manual prior to installing. The installation of this block requires some advanced knowledge about your hardware. As such, if you feel uncomfortable with the steps involved in installing this product, please reach out to our customer support for assistance.
- We recommend the use of a leak tester, such as our Bitspower Digital Leak Detector, after completing the assembly of your liquid cooling loop to make sure there are no leaks prior to filling up your loop with coolant.
- **NEVER** use the leak tester when liquid is present in the loop or when the pump is in operation.
- **DO NOT** exceed 0.5 kg/cm² or 7.0 PSI when using the leak tester. Excessive pressure exerted on your loop may result in damage to your liquid cooling components.
- Bitspower is not responsible for any potential damage from the use of a leak tester.
- **NEVER** overtighten or use excessive force during the installation of any components, unless otherwise stated in the instruction. Overtightening will result in damage to your components.
- Bitspower recommends the use of our Bitspower Pellucid Coolant for the best performance of your liquid cooling setup, as well as using Bitspower Dye for your desired color. We advise against the use of pure distilled water as it may lead to the development of scale and algae over time. Avoid using any other non-recommended coolants or liquid. The use of non-recommended coolants or liquid can result in unexpected abnormalities, such as peeling of the coating on your hardware, built-up of deposit or residue that will result in clogs, tube or O-ring degradation and deformation, or improper operation of the coolant pump. Bitspower is not responsible for any issues that may arise from the use of non-recommended coolant.
- **NEVER** mix or introduce components made from different kinds of metal to your liquid cooling loop. Never use Aluminum based liquid cooling components with Bitspower products. Doing this will result in serious damage and leaks with your liquid cooling components and will void your warranty. If you have any doubts or questions about the components you are using, please reach out to our customer support for assistance.
- Bitspower reserves the right to change the design and interpretations of our products without any prior notice. Actual design and color of product may differ from what is shown on our website.

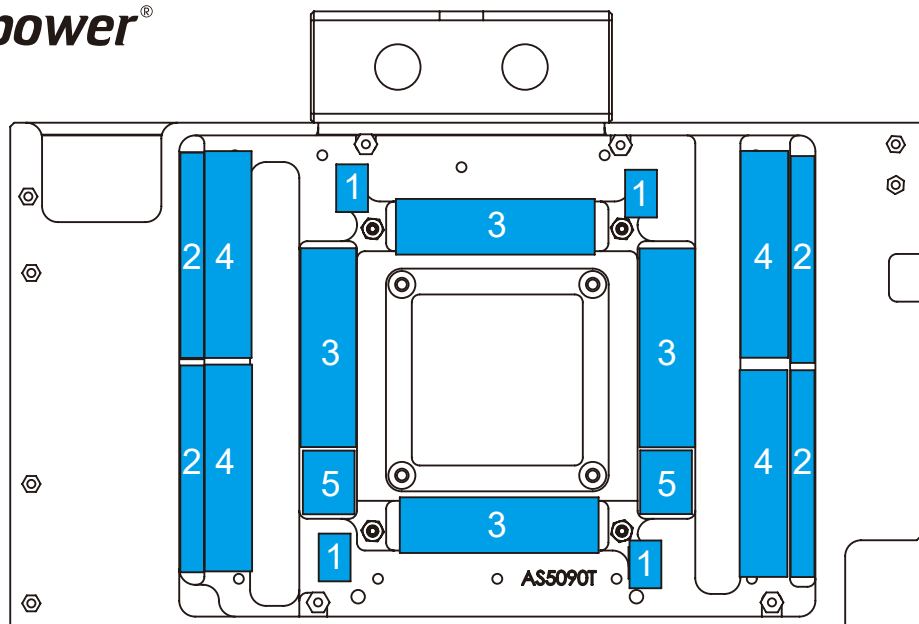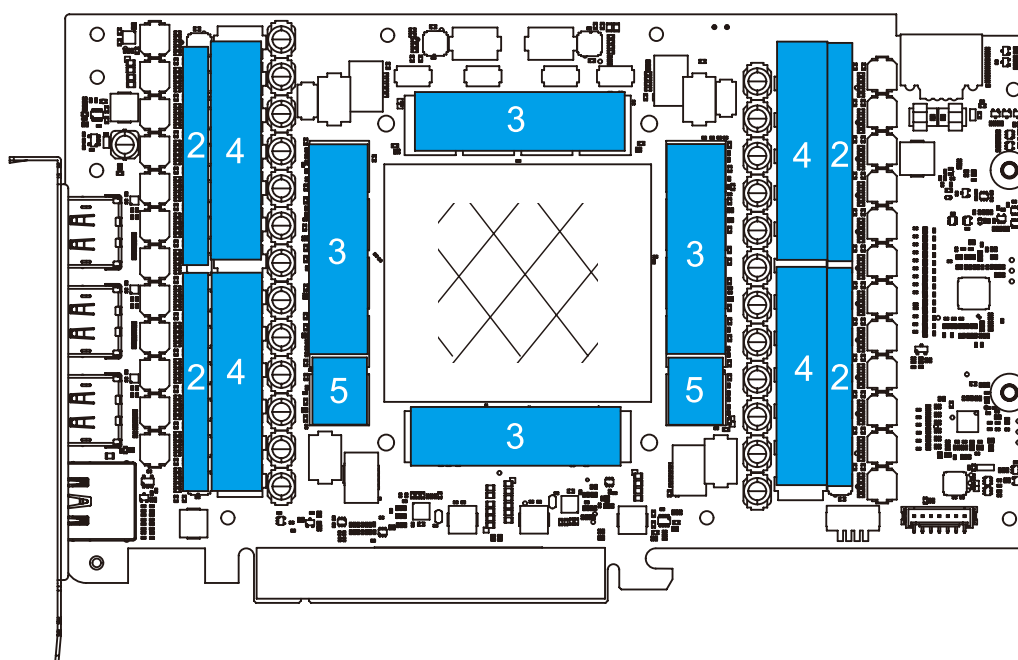Block

GPU(Front)


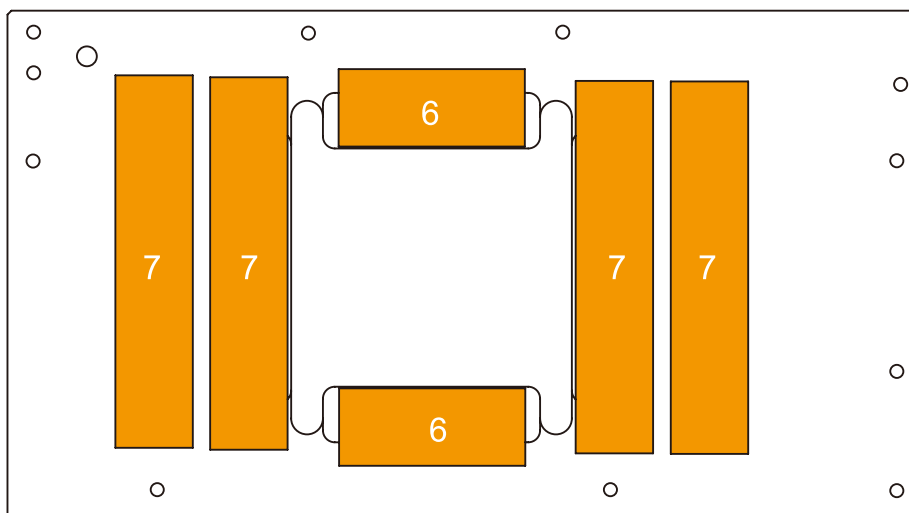
 Apply a thin layer of thermal paste across the entire GPU die.(**3** BPA-TP1-2.5G)

GPU block and Backplate will come with the correct thermal pads preapplied. Please make sure to line up all pieces correctly with the Graphics card before inserting and tightening any screws. In the situation where you need to apply your own thermal pads, please apply them directly on the GPU components.


 1.0 mm Thermal pad

Name	Specification	Quantity
Thermal pad 1	8×12×1mm	2
Thermal pad 2	6×52×1mm	4
Thermal pad 3	14×50×1mm	4
Thermal pad 4	12×52×1mm	4
Thermal pad 5	13×16×1mm	2
Thermal pad 6	93.8×19.5×1.5mm	4
Thermal pad 7	50×19.5×1.5mm	2

Backplate





GPU(Rear)

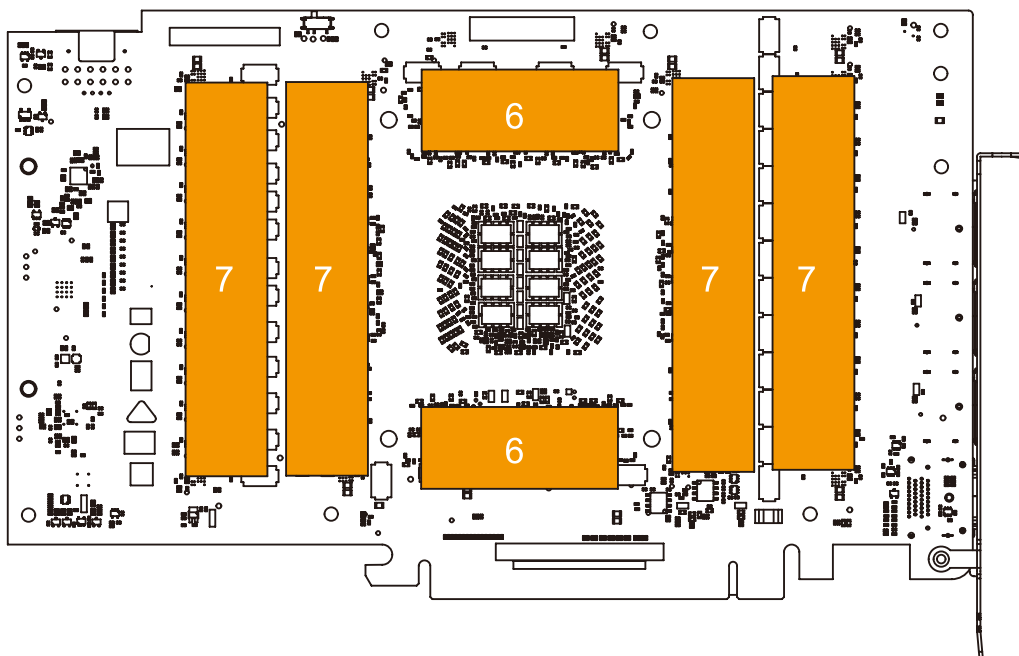


GPU block and Backplate will come with the correct thermal pads preapplied. Please make sure to line up all pieces correctly with the Graphics card before inserting and tightening any screws. In the situation where you need to apply your own thermal pads, please apply them directly on the GPU components.

 1.5 mm Thermal pad


Name	Specification	Quantity
Thermal pad 1	8×12×1mm	2
Thermal pad 2	6×52×1mm	4
Thermal pad 3	14×50×1mm	4
Thermal pad 4	12×52×1mm	4
Thermal pad 5	13×16×1mm	2
Thermal pad 6	93.8×19.5×1.5mm	4
Thermal pad 7	50×19.5×1.5mm	2

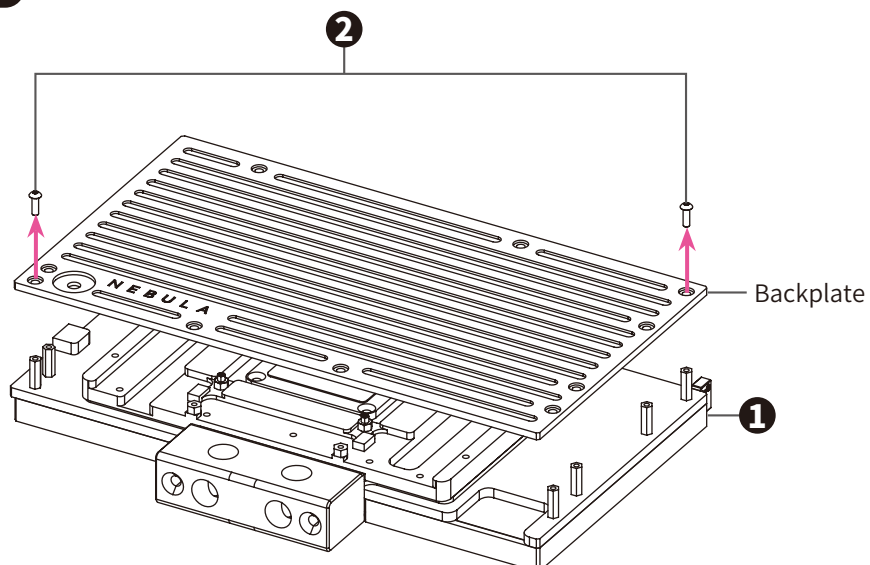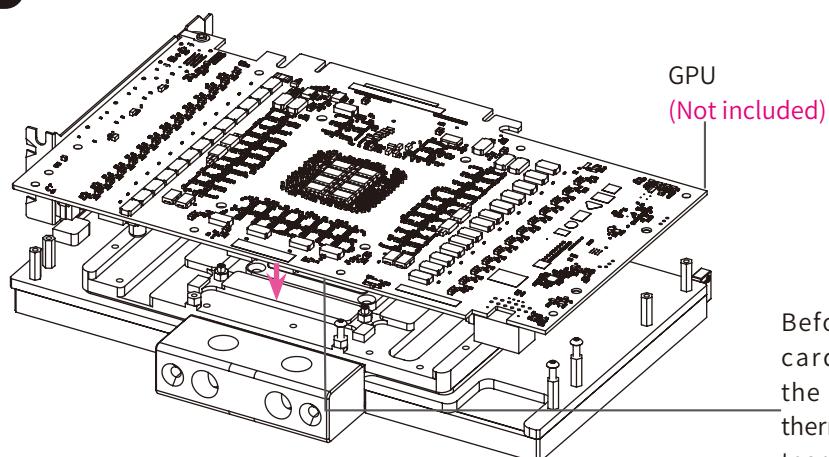step 1

step 2

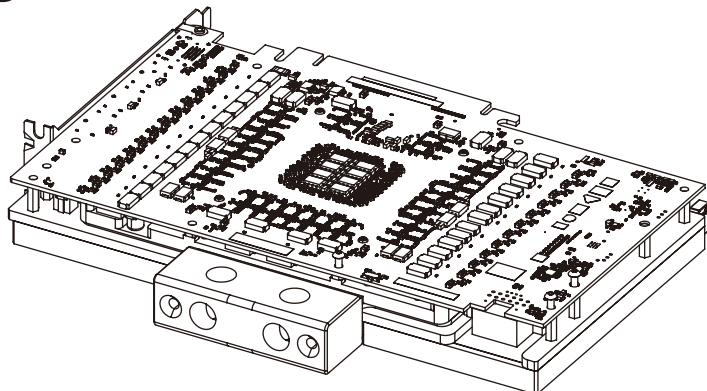
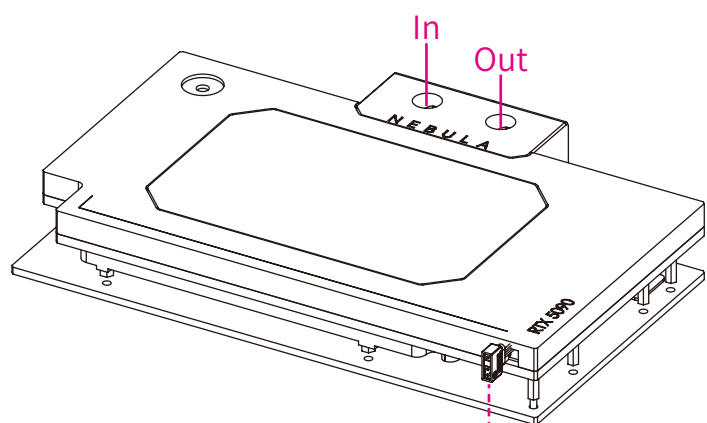
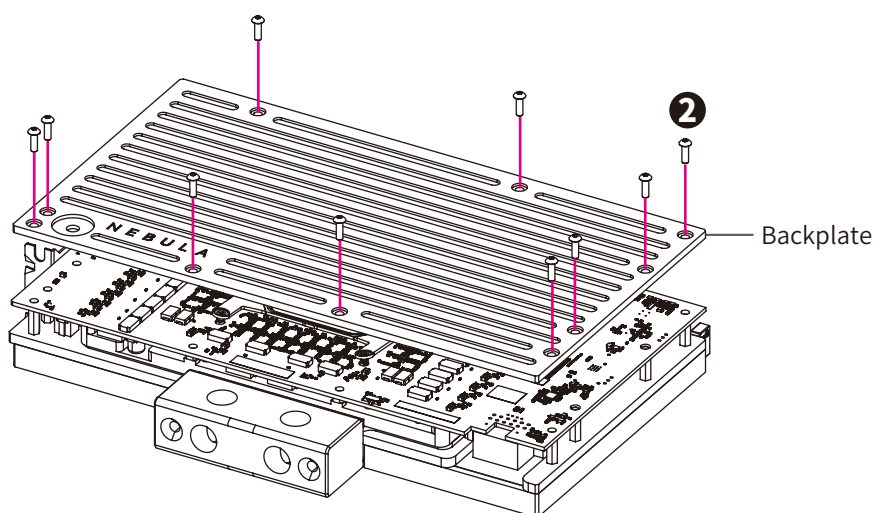
Before installing the graphics card, please make sure that the GPU has been coated with thermal paste. In addition, please tear off the films on the thermal pads of the water block.

step 3

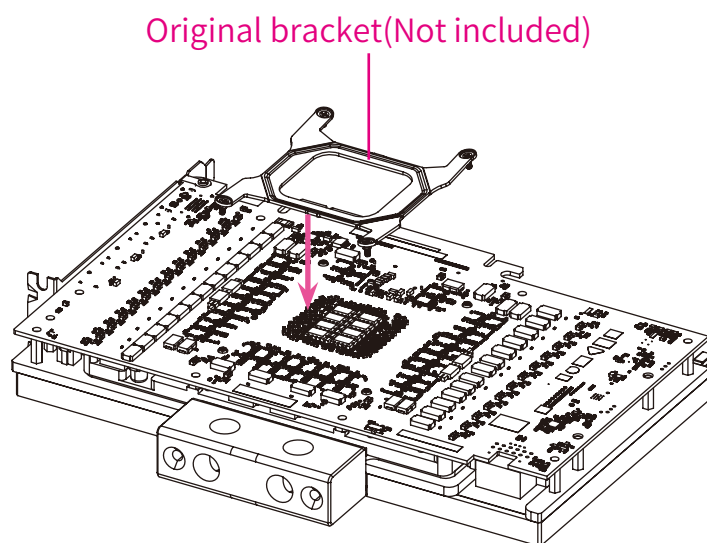
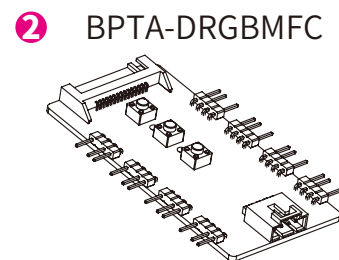
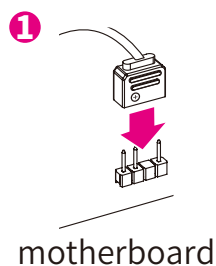
step 4



step 5



★ Digital RGB PIN on ❶ motherboard or ❷ other equipment.



DRGB Multi Function Controller
(Not included)


NEBULA

GeForce RTX 5090 ASUS TUF Gaming

BPM-VG5090AST-V2

包含內容

- 1** BPM-VG5090AST-V2 1 組

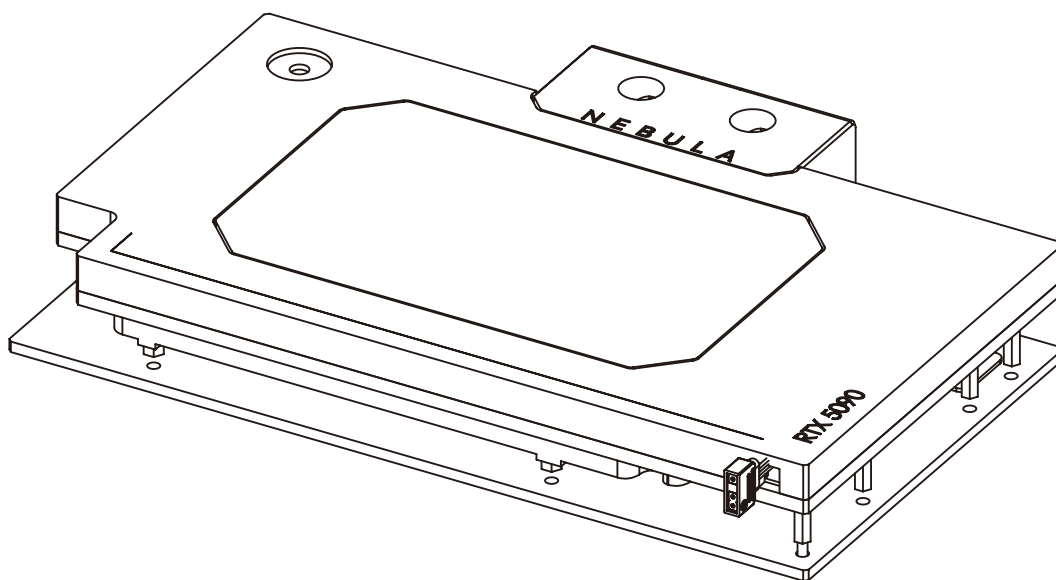


- 2** M2.5 x 8 螺絲[#] 11 支



[#] 兩根螺絲預先鎖上


- 3** BPA-TP1-2.5G 1 支




注意事項

- 請在安裝前仔細閱讀並遵循本手冊中的安裝指南。安裝此水冷頭需要對您的硬體有一些進階知識。因此，如果您對安裝的步驟感到不了解，請聯繫我們的客戶支援以獲得幫助。
- 我們建議在組裝完您的水路系統後使用測漏計測試，例如我們的 Bitspower 數位測漏計，以免在注入水冷液後發生洩漏狀況。
- **禁止**在水路有水或水泵運作時使用測漏計。
- 使用測漏計時，壓力**不得超過** 0.5 kg/cm^2 或 7.0 PSI。對您的水冷系統施加過高的壓力可能會造成您的水冷零件損壞。
- Bitspower 不對使用測漏計造成的任何潛在損壞負責。
- 在安裝任何零件時絕對**不要**過度擰緊，除非在說明中另有說明，否則過度擰緊會導致您的零件損壞。
- 建議使用我們的 Bitspower 透明水冷液來獲得最佳的冷卻效果，同時使用 Bitspower 染料來達成您想要的顏色。我們建議不要使用純蒸餾水，因為長時間使用可能會導致水垢與藻類的產生。請避免使用任何其他非推薦的水冷液或液體。使用非推薦的水冷液或液體可能會導致異常狀況，如硬體塗層剝落、沉積物或殘渣積聚導致管路或 O 圈的損壞和變形及水泵的不正常運作。Bitspower 不因使用非推薦水冷液而出現的任何問題負責。
- 絕對**不要**混用或使用不同種類的金屬製成的零件至您的水冷系統中。絕對不要使用鋁底的水冷零件與 Bitspower 產品一起使用，會導致您的水冷零件嚴重損壞和漏水，並使您的保固失效。如果您對使用的零件有任何疑問或問題，請聯繫我們的客戶支援以獲得幫助。
- Bitspower 保留更改我們產品設計和解釋的權利，恕不另行通知。產品的實際設計和顏色可能與我們的網站上顯示的不同。

冷頭

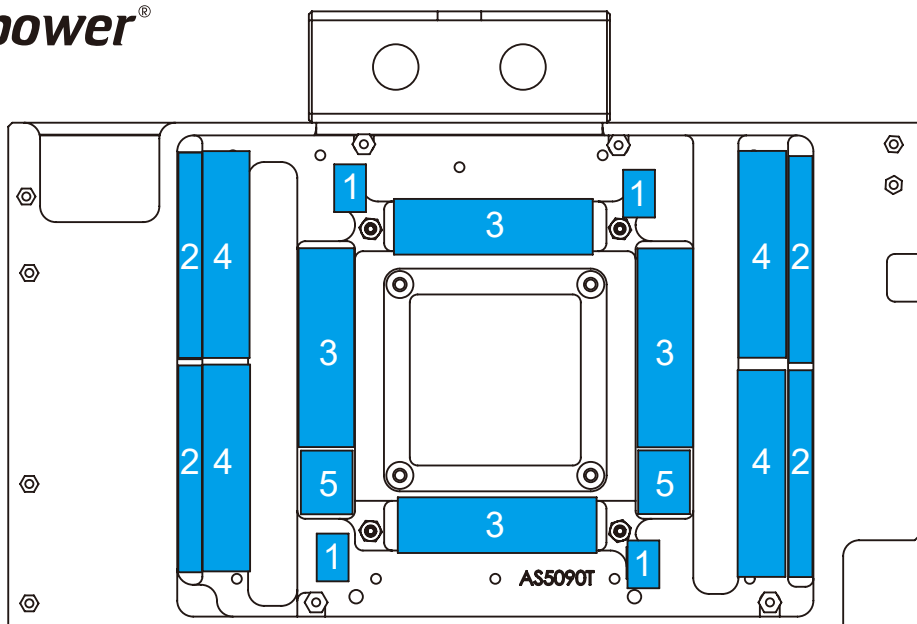

GPU(前)

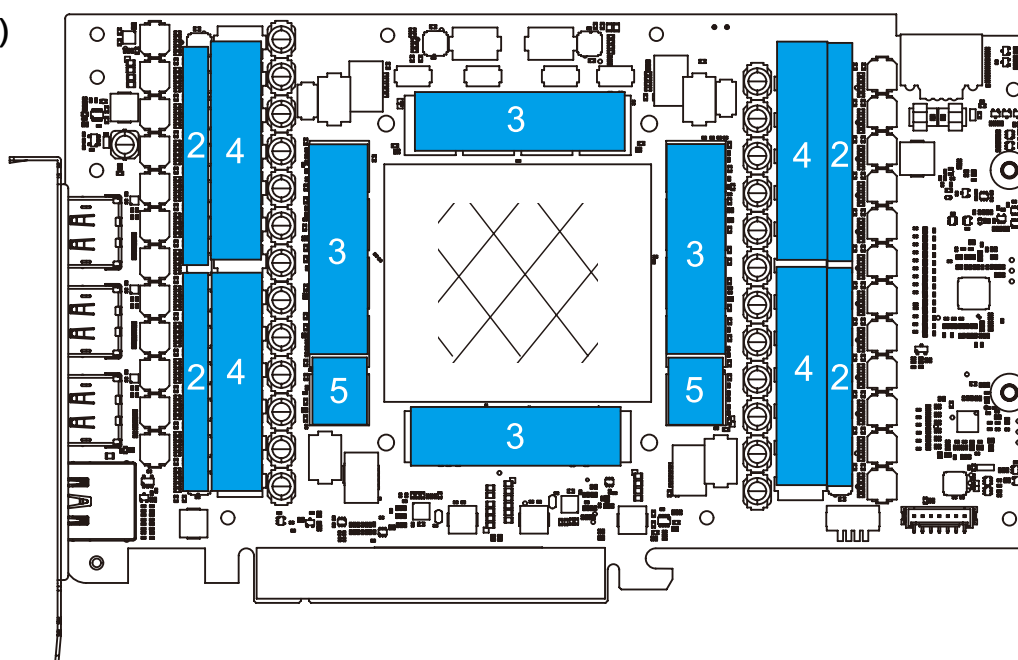


XXXX 在 GPU 晶片上塗抹一層薄薄的導熱膏。(③ BPA-TP1-2.5G)

GPU 冷頭和背板會預先安裝對應的導熱墊片。在安裝和擰緊任何螺絲之前，請確保所有部件與顯示卡正確對齊。如果您需要自行安裝導熱墊片，請直接貼在 GPU 上。


 1.0 mm 導熱墊片

名稱	規格	數量
導熱墊片 1	8×12×1mm	2
導熱墊片 2	6×52×1mm	4
導熱墊片 3	14×50×1mm	4
導熱墊片 4	12×52×1mm	4
導熱墊片 5	13×16×1mm	2
導熱墊片 6	93.8×19.5×1.5mm	4
導熱墊片 7	50×19.5×1.5mm	2

背板

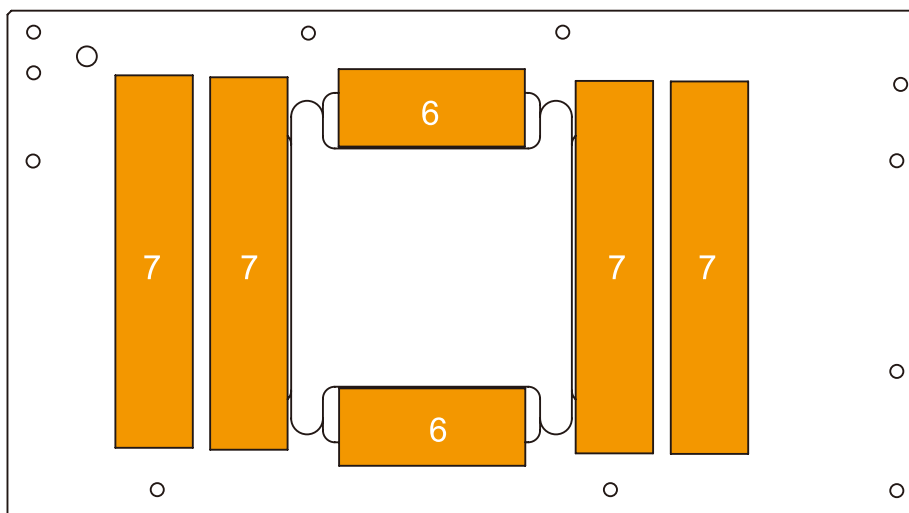



GPU(背面)

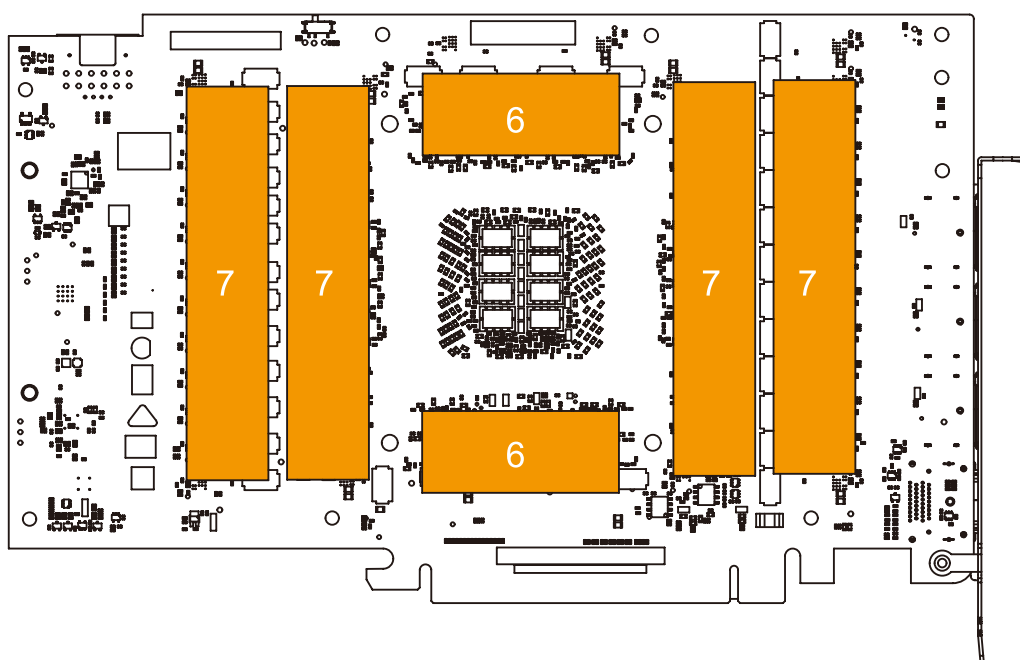


GPU 冷頭和背板會預先安裝對應的導熱墊片。在安裝和擰緊任何螺絲之前，請確保所有部件與顯示卡正確對齊。如果您需要自行安裝導熱墊片，請直接貼在 GPU 上。

 1.5 mm 導熱墊片


名稱	規格	數量
導熱墊片 1	8×12×1mm	2
導熱墊片 2	6×52×1mm	4
導熱墊片 3	14×50×1mm	4
導熱墊片 4	12×52×1mm	4
導熱墊片 5	13×16×1mm	2
導熱墊片 6	93.8×19.5×1.5mm	4
導熱墊片 7	50×19.5×1.5mm	2

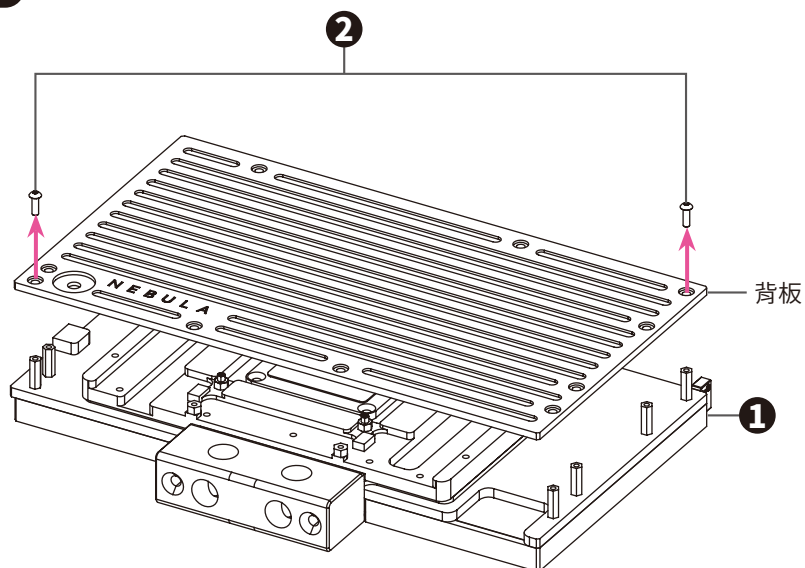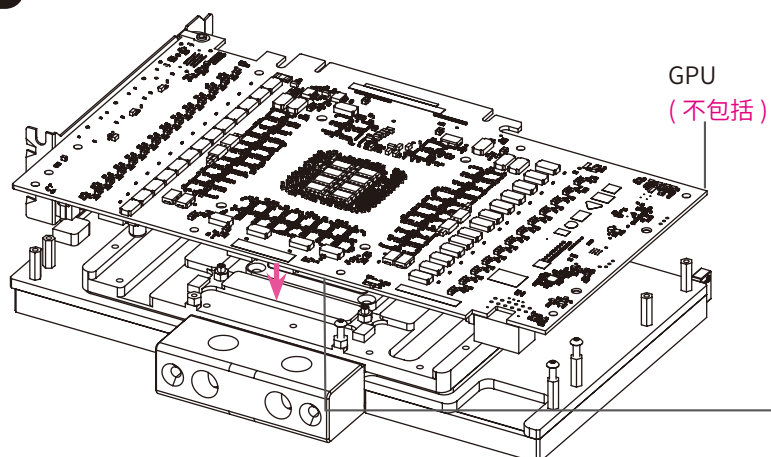步驟 1

步驟 2

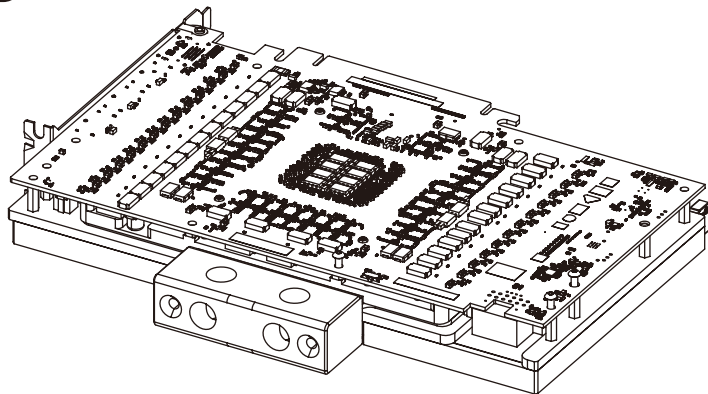
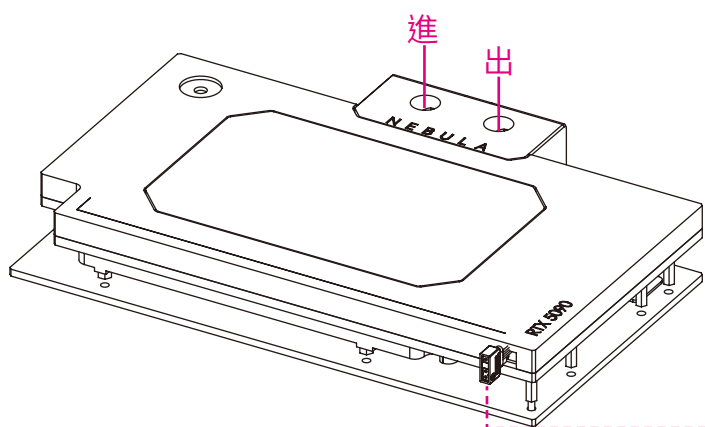
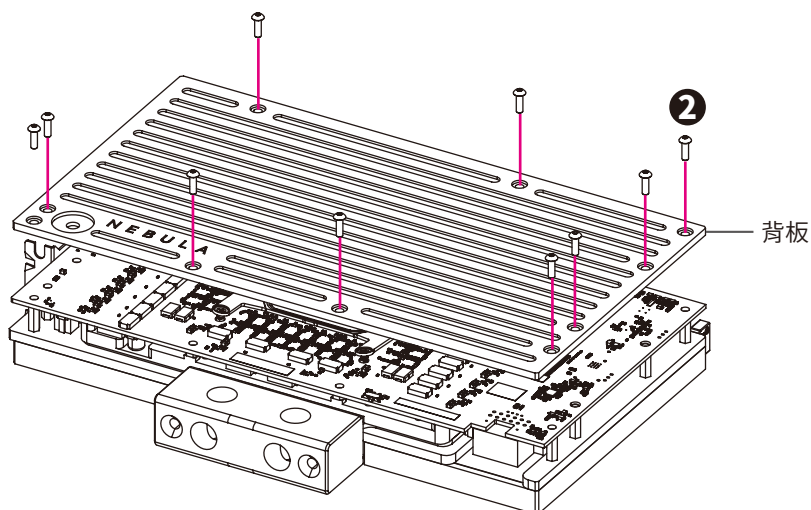
在安裝顯卡之前，請確保 GPU 已塗上導熱膏。
另外，請撕下水冷頭導熱墊上的貼膜。

步驟 3

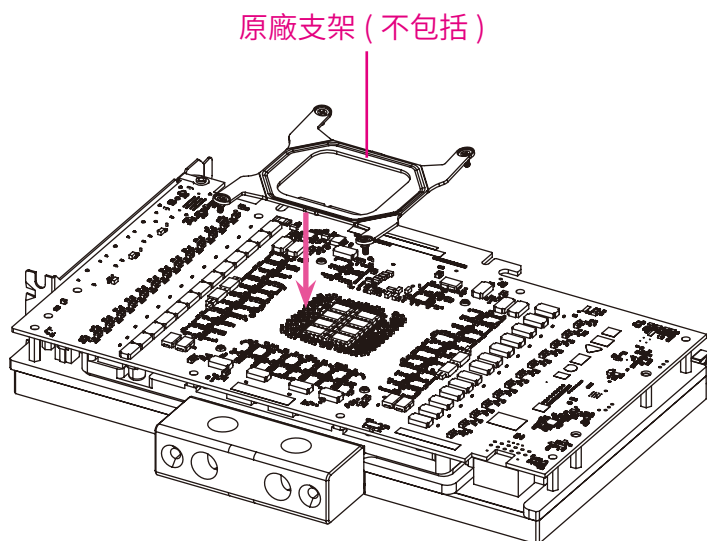
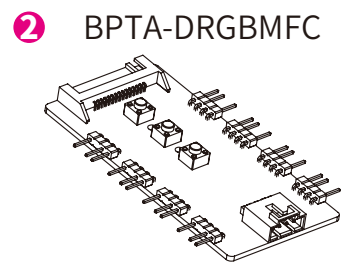
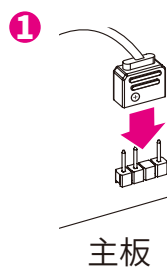
步驟 4



步驟 5



★請接①主板或②其他設備的 DRGB 插槽



DRGB 控制器 (不包括)


NEBULA

GeForce RTX 5090 ASUS TUF Gaming

BPM-VG5090AST-V2

包含內容

- 1** BPM-VG5090AST-V2 1 组

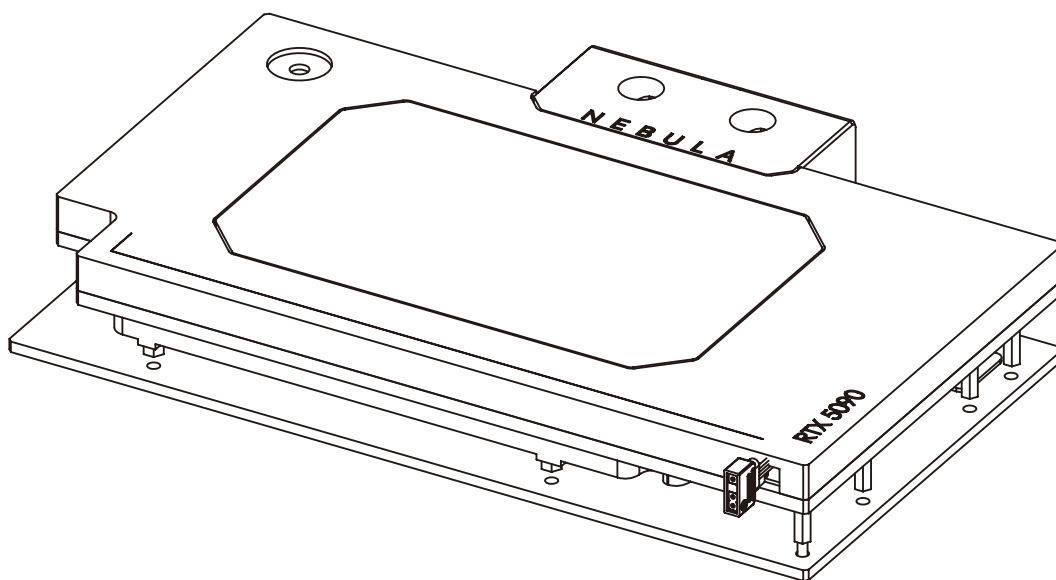


- 2** M2.5 x 8 螺丝 # 11 支



两根螺丝预先锁上


- 3** BPA-TP1-2.5G 1 支




注意事项

- 请在安装前仔细阅读并遵循本手册中的安装指南。安装此水冷头需要对您的硬体有一些进阶知识。因此，如果您对安装的步骤感到不了解，请联系我们的客户支援以获得帮助。
- 我们建议在组装完您的水路系统后使用测漏计测试，例如我们的 Bitspower 数位测漏计，以免在注入水冷液后发生泄漏状况。
- **禁止**在水路有水或水泵运作时使用测漏计。
- 使用测漏计时，压力**不得超过** 0.5 kg/cm^2 或 7.0 PSI。对您的水冷系统施加过高的压力可能会造成您的水冷零件损坏。
- Bitspower 不对使用测漏计造成的任何潜在损坏负责。
- 在安装任何零件时绝对**不要**过度拧紧，除非在说明中另有说明，否则过度拧紧会导致您的零件损坏。
- 建议使用我们的 Bitspower 透明水冷液来获得最佳的冷却效果，同时使用 Bitspower 染料来达成您想要的颜色。我们建议不要使用纯蒸馏水，因为长时间使用可能会导致水垢与藻类的产生。请避免使用任何其他非推荐的水冷液或液体。使用非推荐的水冷液或液体可能会导致异常状况，如硬体涂层剥落、沉积物或残渣积聚导致管路或 O 圈的损坏和变形及水泵的不正常运作。Bitspower 不因使用非推荐水冷液而出现的任何问题负责。
- 绝对**不要**混用或使用不同种类的金属制成的零件至您的水冷系统中。绝对不要使用铝底的水冷零件与 Bitspower 产品一起使用，会导致您的水冷零件严重损坏和漏水，并使您的保固失效。如果您对使用的零件有任何疑问或问题，请联系我们的客户支援以获得帮助。
- Bitspower 保留更改我们产品设计和解释的权利，恕不另行通知。产品的实际设计和颜色可能与我们的网站上显示的不同。

冷头

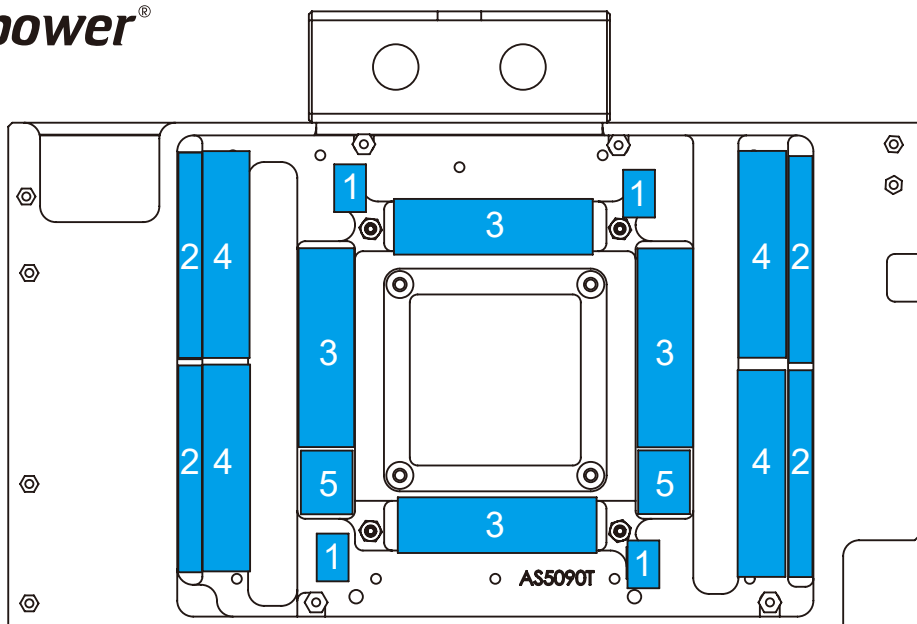

GPU(前)

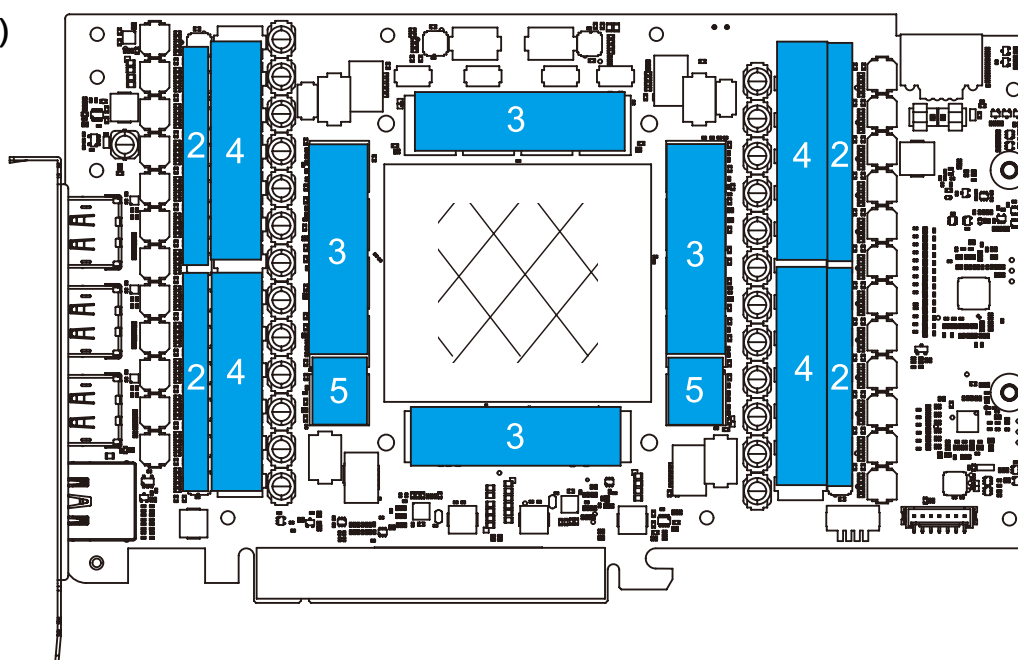


XXXX 在 GPU 晶片上涂抹一层薄薄的导热膏。（③ BPA-TP1-2.5G）

GPU 冷头和背板会预先安装对应的导热垫片。在安装和拧紧任何螺丝之前，请确保所有部件与显示卡正确对齐。如果您需要自行安装导热垫片，请直接贴在 GPU 上。


 1.0 mm 导热垫片

名称	规格	数量
导热垫片 1	8×12×1mm	2
导热垫片 2	6×52×1mm	4
导热垫片 3	14×50×1mm	4
导热垫片 4	12×52×1mm	4
导热垫片 5	13×16×1mm	2
导热垫片 6	93.8×19.5×1.5mm	4
导热垫片 7	50×19.5×1.5mm	2

背板

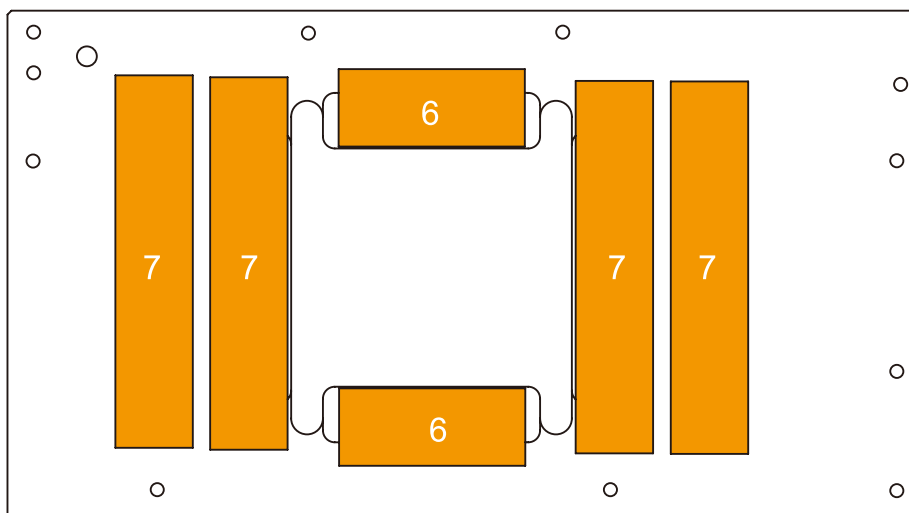



GPU(背面)

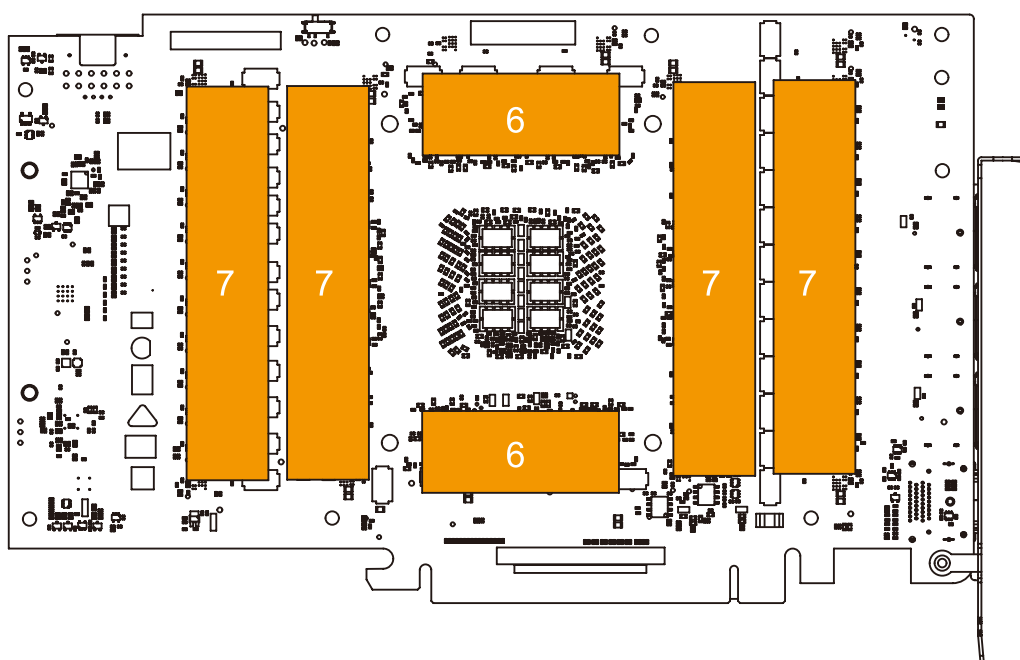


GPU 冷头和背板会预先安装对应的导热垫片。在安装和拧紧任何螺丝之前，请确保所有部件与显示卡正确对齐。如果您需要自行安装导热垫片，请直接贴在 GPU 上。

 1.5 mm 导热垫片


名称	规格	数量
导热垫片 1	8×12×1mm	2
导热垫片 2	6×52×1mm	4
导热垫片 3	14×50×1mm	4
导热垫片 4	12×52×1mm	4
导热垫片 5	13×16×1mm	2
导热垫片 6	93.8×19.5×1.5mm	4
导热垫片 7	50×19.5×1.5mm	2

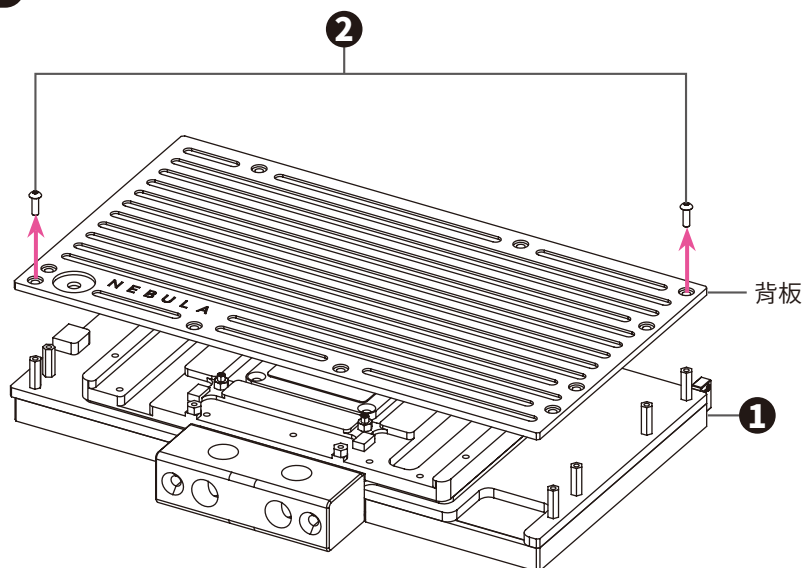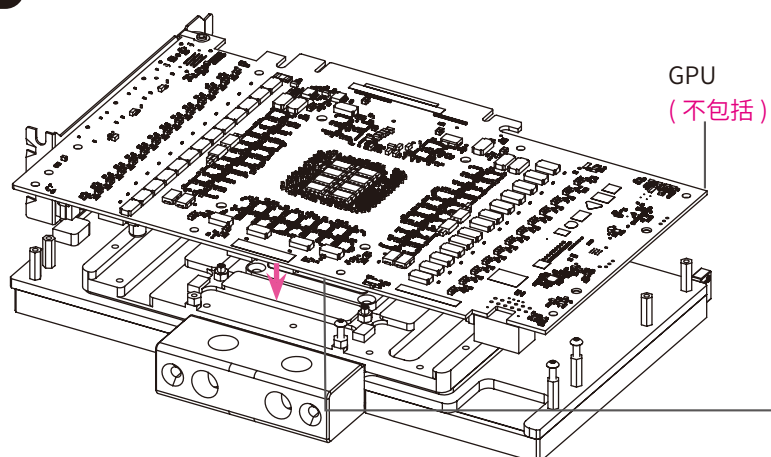步骤 1

步骤 2

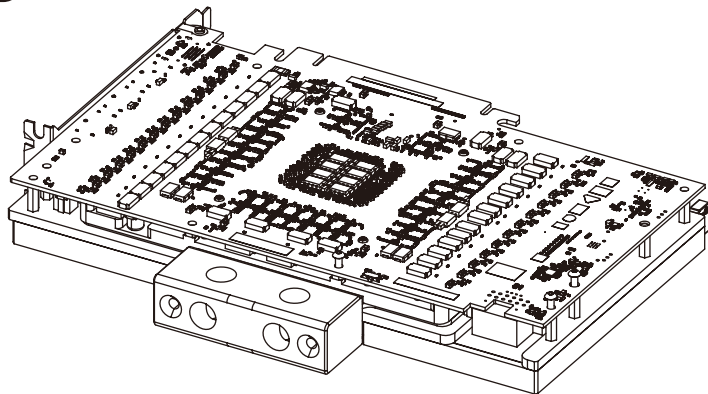
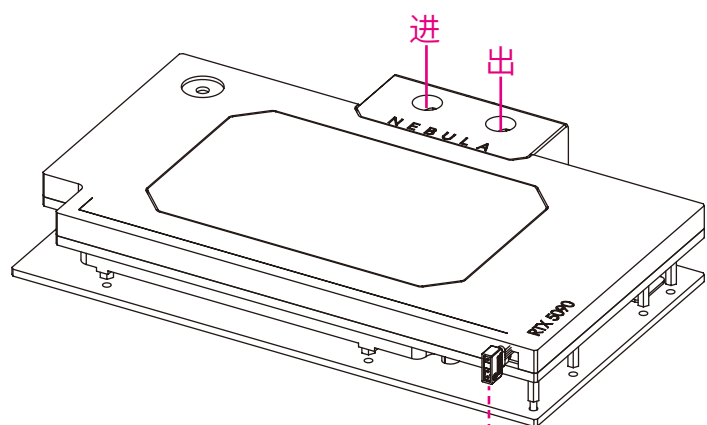
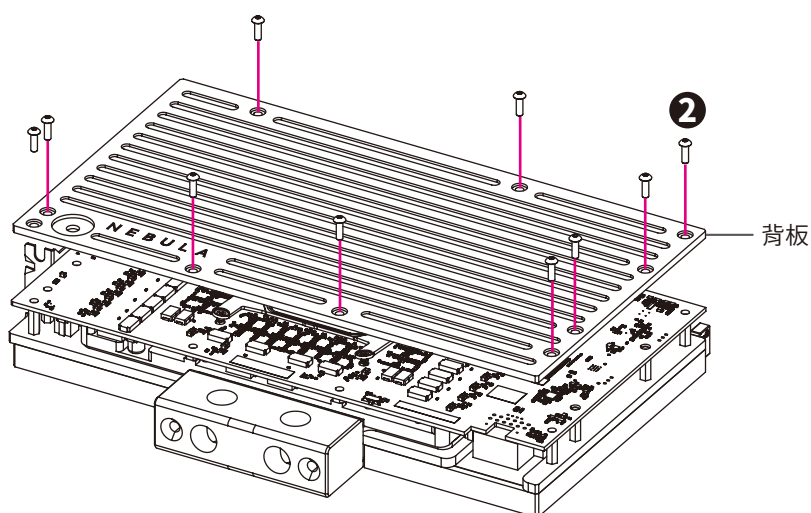
在安装显卡之前，请确保 GPU 已涂上导热膏。
另外，请撕下水冷头导热垫上的贴膜。

步骤 3

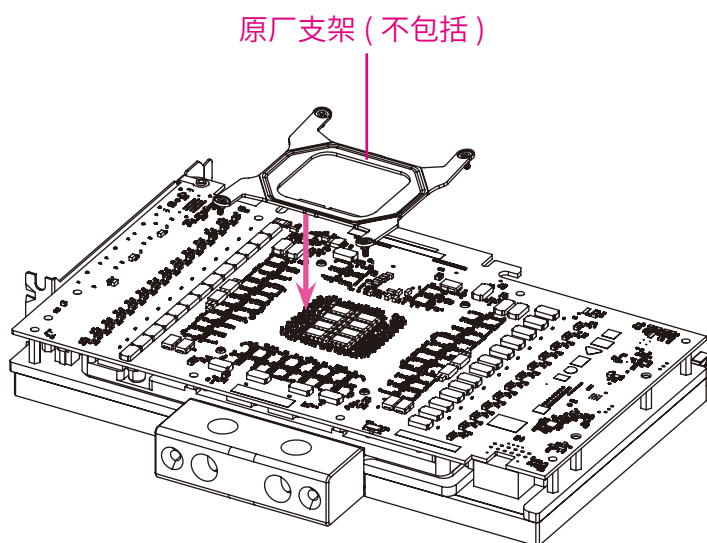
步骤 4



步骤 5



★ 请接①主板或②其他设备的 DRGB 插槽

